


# FRONT BUMPER COMPONENTS


76161-01

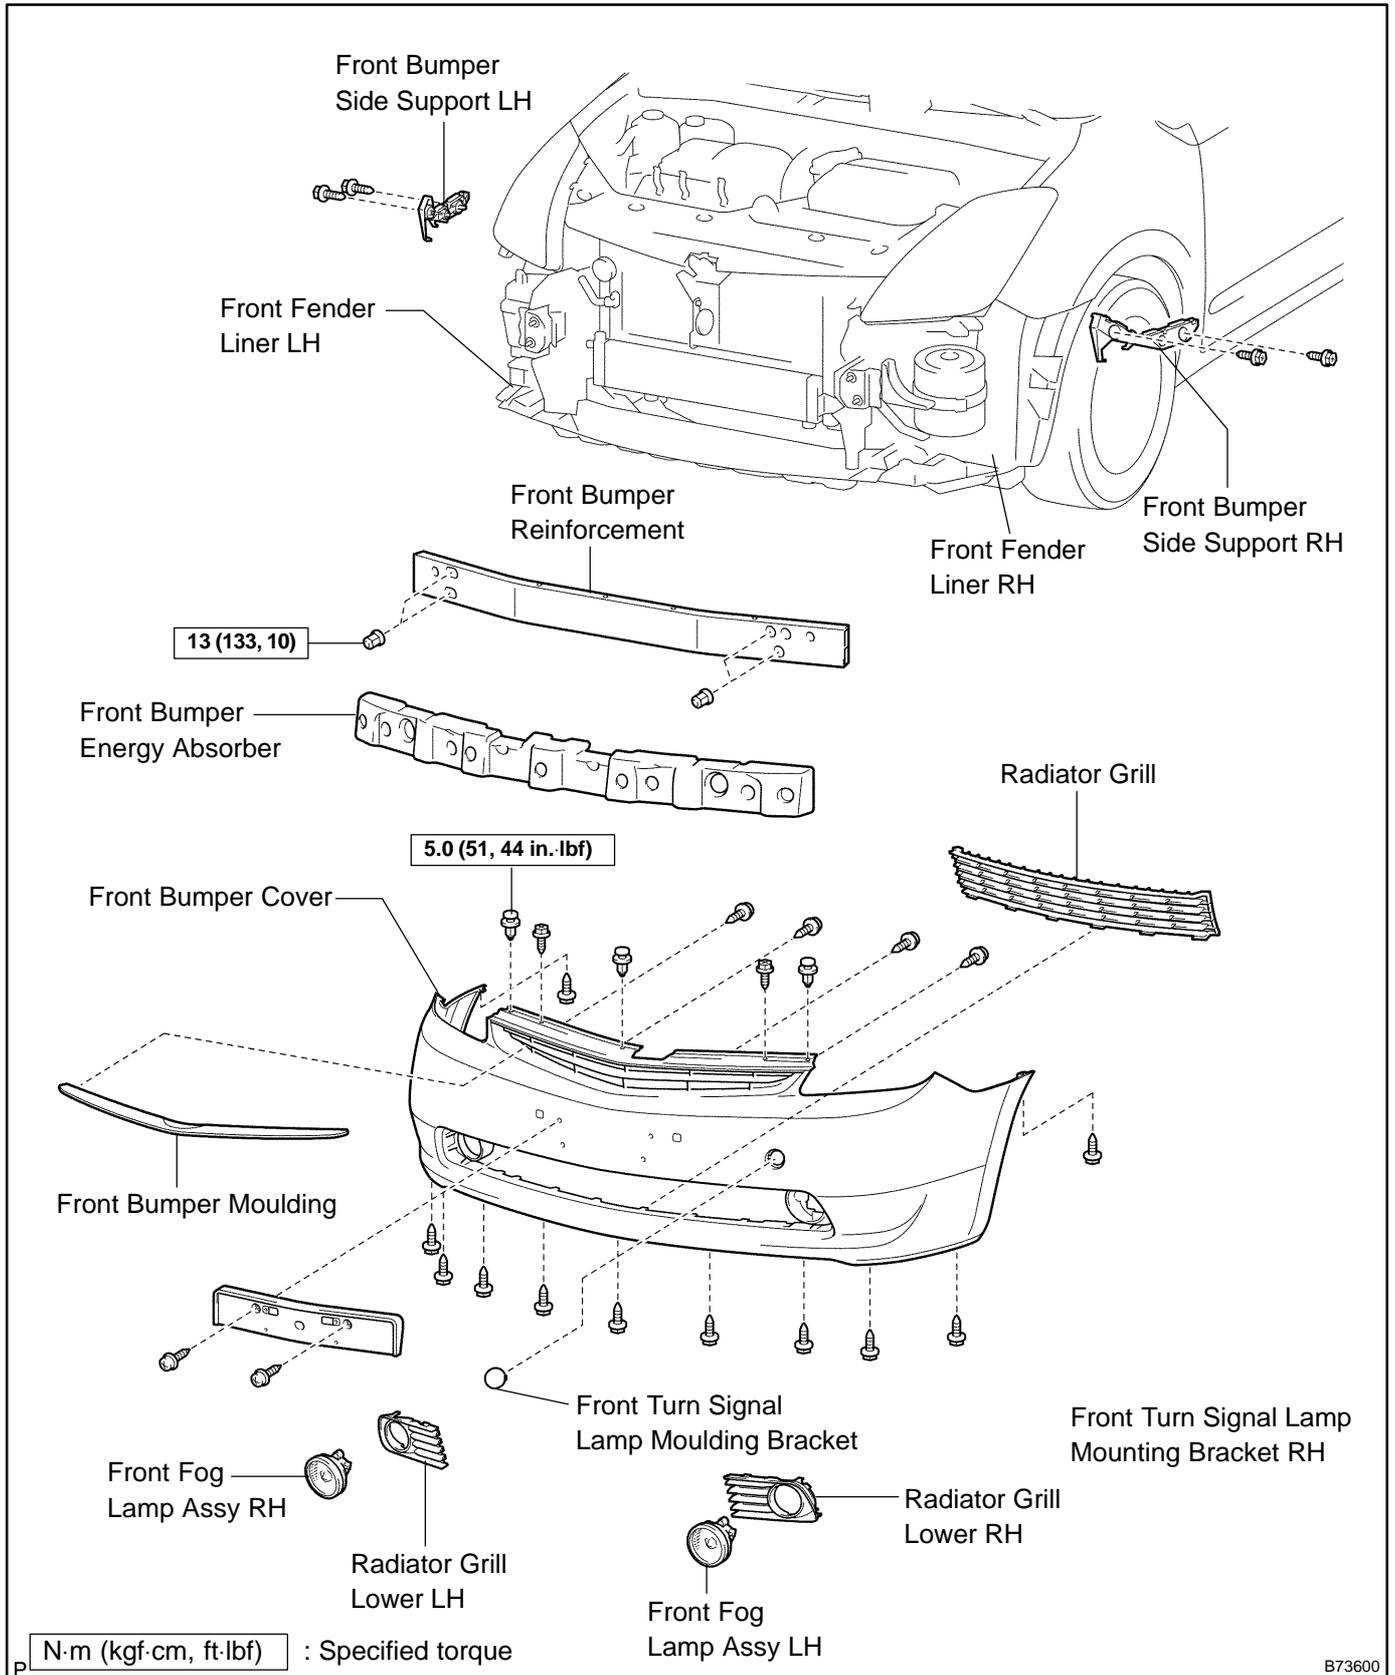

## REPLACEMENT

### HINT:

- The installation procedures are the removal procedures in reverse order.
- A bolt without a torque specification is shown in the standard bolt chart (see page 03-2).

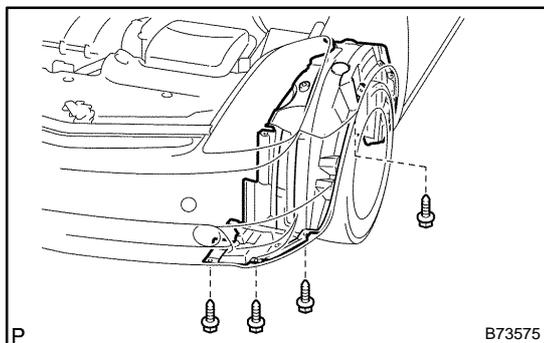

### 1. REMOVE FRONT FENDER LINER LH

- Remove the 4 screws.
- Partially remove the fender liner.


### HINT:

It is not necessary to fully remove the fender liner completely. Partially remove it so that the bumper cover can be removed in step (3).

### 2. REMOVE FRONT FENDER LINER RH

### HINT:

Use the same procedure described for the LH side.

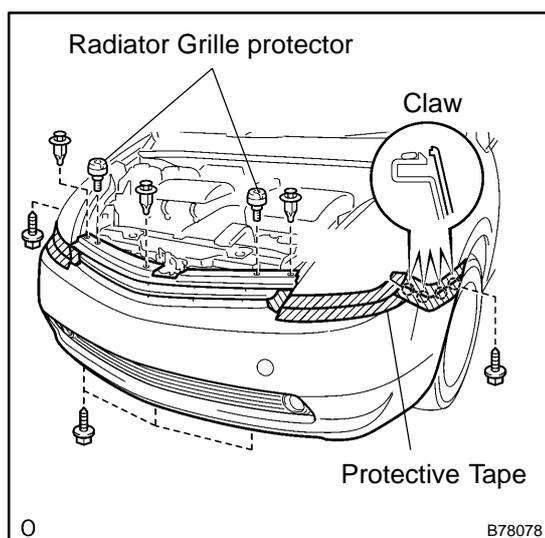


### 3. REMOVE FRONT BUMPER COVER

- Put protective tape under the front fender.
- Remove the 2 radiator grille protectors and 5 screws.
- Using a screwdriver, disengage the 8 clips.

### HINT:

Tape the screwdriver tip before use.

- w/ Fog lamp:  
Disconnect the 2 fog lamp connectors.

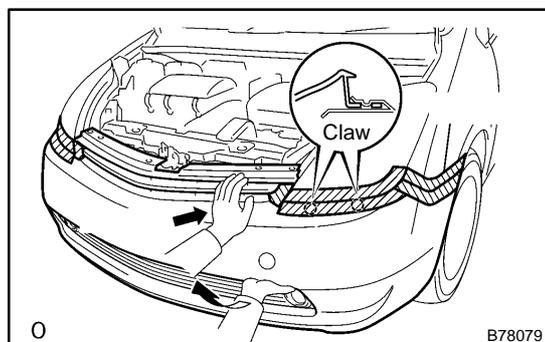

- Engage the 4 claws.
  - Hold the front bumper on its upper and lower parts with your hands as shown in the illustration.
  - Pull up the front bumper's lower part while holding its upper part securely.

### NOTICE:

- **Securely hold the front bumper's upper part, otherwise the claw will not be disengaged.**
- **Forcibly pulling up the front bumper will deform the claw.**

**4. REMOVE FRONT BUMPER ENERGY ABSORBER****5. REMOVE FRONT BUMPER REINFORCEMENT**

- (a) Using a screwdriver, remove the 4 wire harness clamps.

HINT:

Tape the screwdriver tip before use.


- (b) Remove the 4 nuts and reinforcement.

**6. REMOVE FRONT BUMPER SIDE SUPPORT LH**

- (a) Remove the 2 screws and side support.

**7. REMOVE FRONT BUMPER SIDE SUPPORT RH**

- (a) Remove the 2 screws and side support.

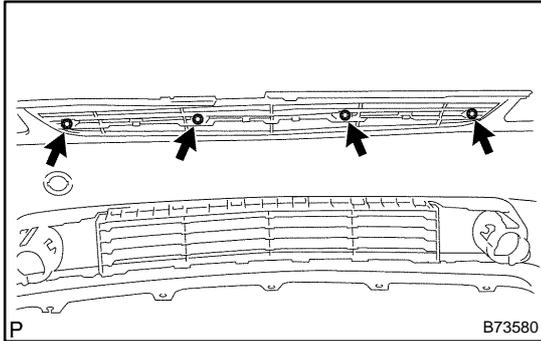
**8. REMOVE FRONT BUMPER MOULDING**

- (a) Remove the 4 screws.

- (b) Using a screwdriver, disengage the 4 claws and moulding.

HINT:

Tape the screwdriver tip before use.

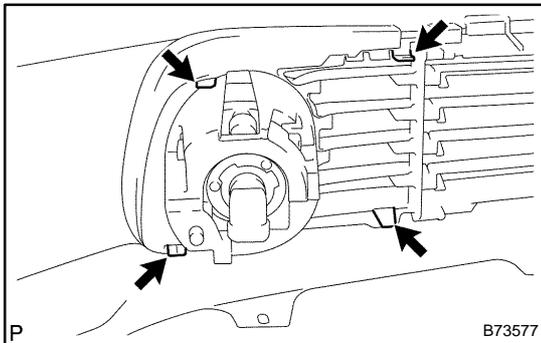**9. REMOVE FOG LAMP ASSY LH****10. REMOVE FOG LAMP ASSY RH****11. REMOVE RADIATOR GRILLE LOWER LH**

- (a) Using a screwdriver, disengage the 4 claws and remove the grill lower.


HINT:

Tape the screwdriver tip before use.

**12. REMOVE RADIATOR GRILLE LOWER RH**

HINT:

Use the same procedure described for the LH side.

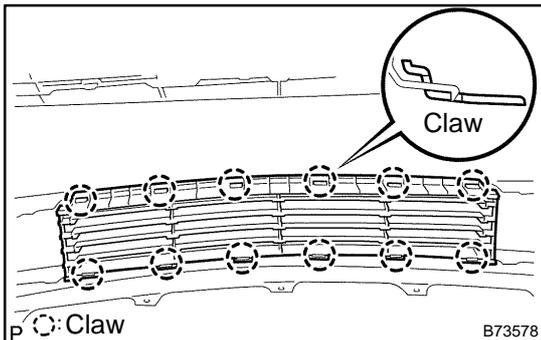**13. REMOVE RADIATOR GRILLE**

- (a) Using a screwdriver, disengage the 12 claws and remove the grill.

HINT:

Tape the screwdriver tip before use.

**14. REMOVE FRONT TURN SIGNAL LAMP MOUNTING BRACKET RH**

- (a) Using a screwdriver tip before use.

**15. INSTALL FRONT BUMPER REINFORCEMENT**

- (a) Install the reinforcement with the 6 nuts.

**Torque: 13 N·m (133, kgf·cm, 10 ft·lbf)**


**16. INSTALL FRONT BUMPER COVER**

- (a) Install the bumper cover with the 2 bolts.

**Torque: 5.0 N·m (51, kgf·cm, 44 in·lbf)**

# REAR BUMPER COMPONENTS

7616K-01

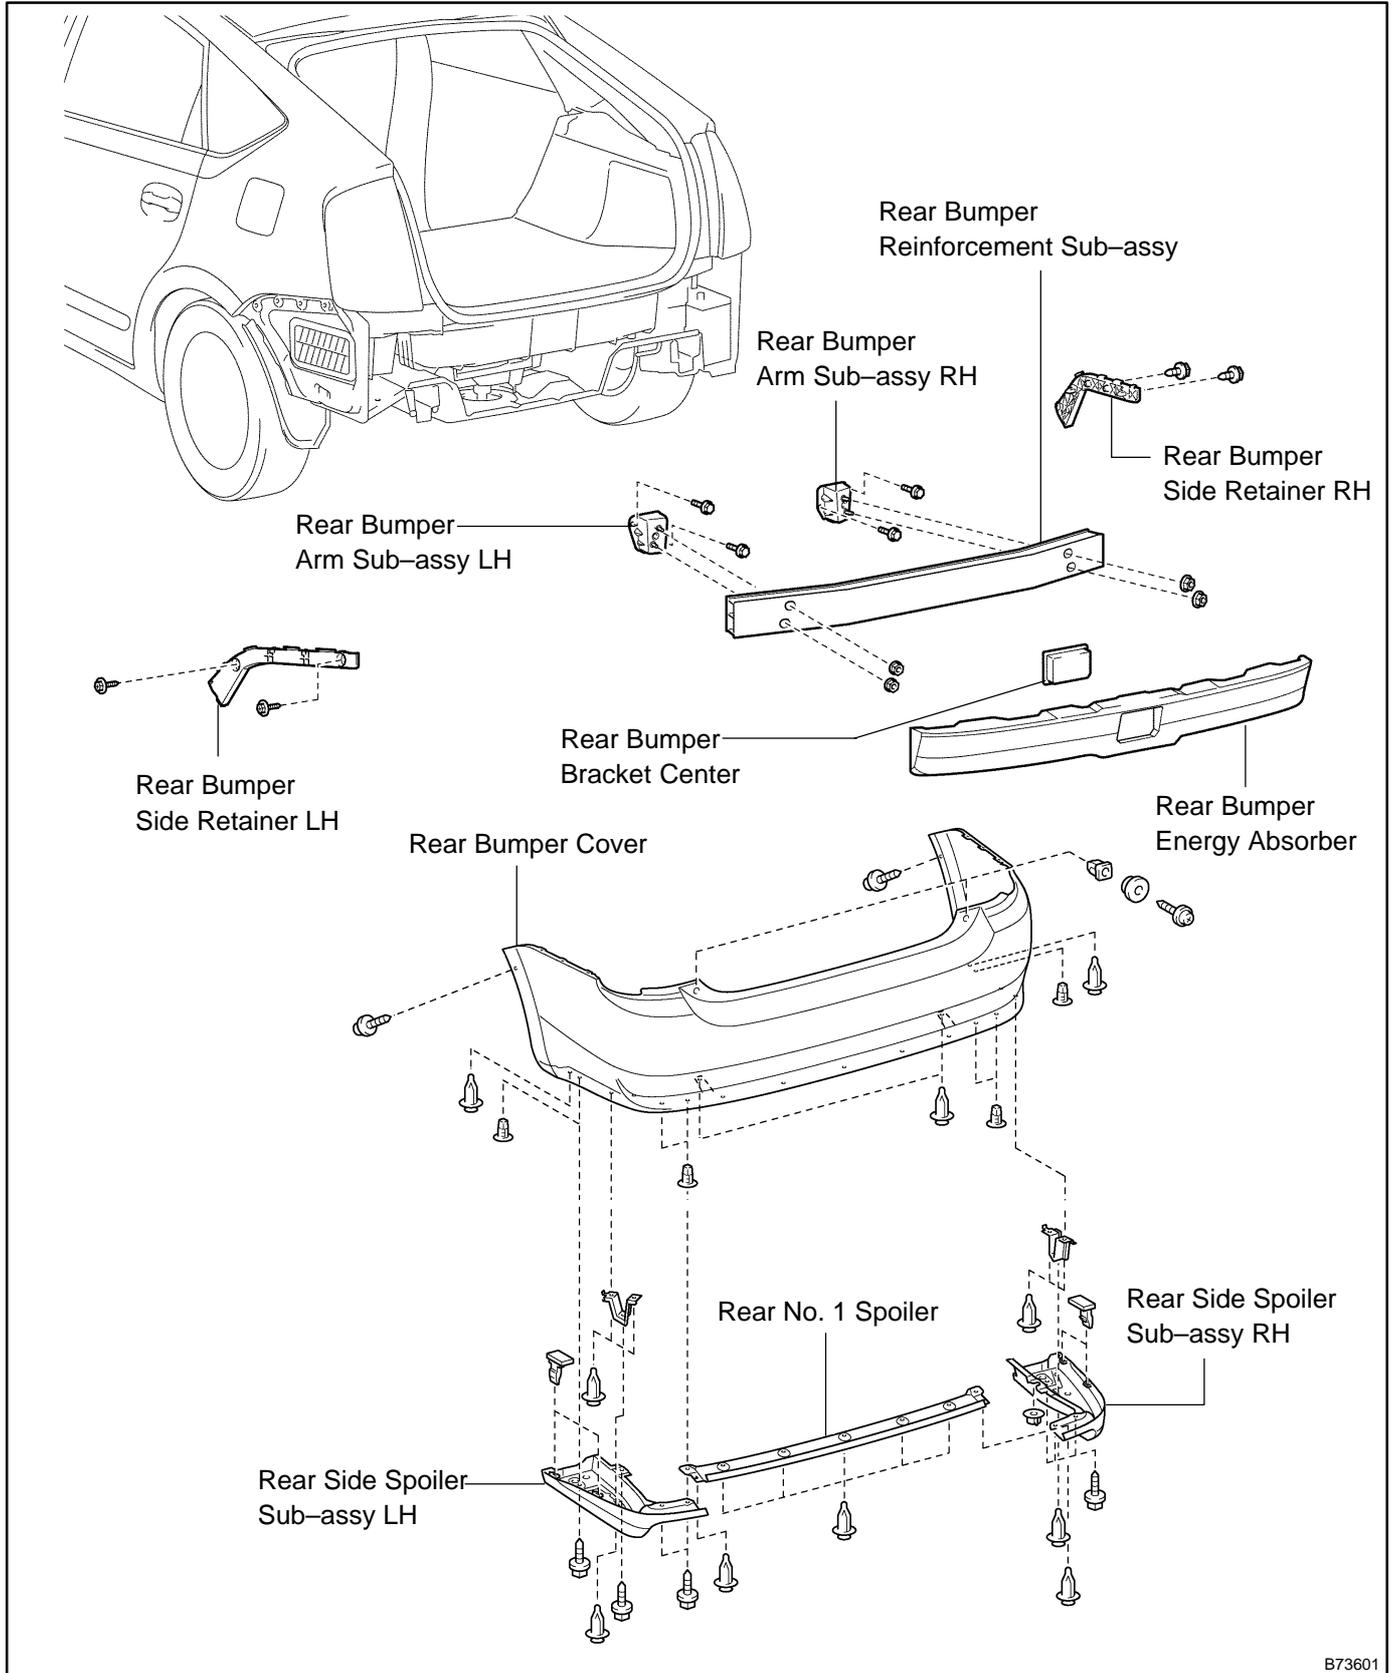

B73601

## REPLACEMENT


### HINT:

- The installation procedures are the removal procedures in reverse order.
- When replacing the spoiler, heat the body and spoiler using a heat light.

### Heating temperature:

Item	Temperature
Spoiler No. 1 Side spoiler	40 to 60°C (104 to 140°F)
Bumper	20 to 30°C (68 to 86°F)

- A bolt without a torque specification is shown in the standard bolt chart (see page 03-2).

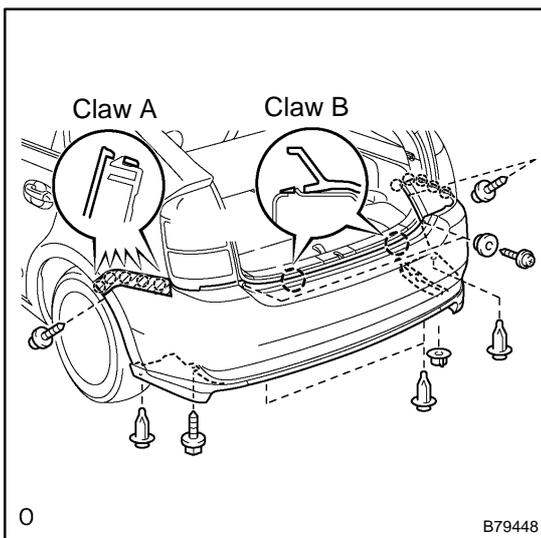


### 1. REMOVE REAR BUMPER COVER

- Put protective tape under the quarter panel.
- Remove the 2 screws and 2 stoppers.
- Remove the clip, screw and side spoiler LH.
- Remove the nut, clip and side spoiler RH.
- Using a clip remover, remove the 4 clips.
- Disengage the 10 claws labeled A and 2 claws labeled B.

### HINT:

Tape the screwdriver tip before use.

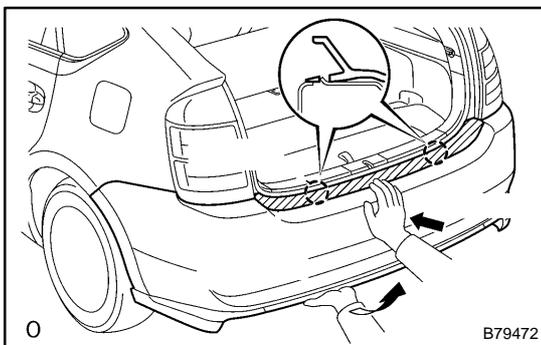

### (g) Engage the claw.

- Hold the rear bumper on its upper and lower parts with your hands as shown in the illustration.
- Pull up the rear bumper's lower part while holding its upper part securely.

### NOTICE:

- Securely hold the rear bumper's upper part, otherwise the claw will not be disengaged.
- Forcibly pulling up the rear bumper will deform the claw.

### 2. REMOVE REAR BUMPER ENERGY ABSORBER

### 3. REMOVE REAR BUMPER BRACKET CENTER

### 4. REMOVE REAR BUMPER REINFORCEMENT SUB-ASSY

- Remove the 4 nuts and reinforcement.

### 5. REMOVE REAR BUMPER ARM SUB-ASSY LH

- Remove the 2 bolts and bumper arm.

### 6. REMOVE REAR BUMPER ARM SUB-ASSY RH


- Remove the 2 bolts and bumper arm.

### 7. REMOVE REAR BUMPER SIDE RETAINER LH

- Remove the 2 screws and side retainer.

### 8. REMOVE REAR BUMPER SIDE RETAINER RH

- Remove the 2 screws and side retainer.

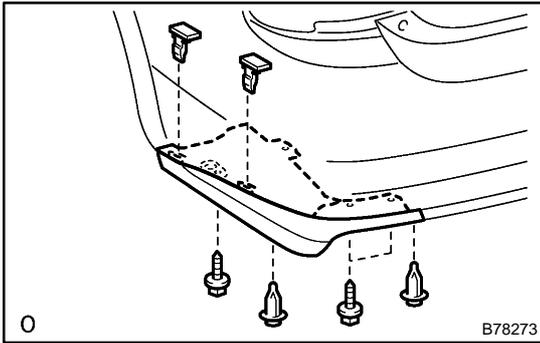


**9. REMOVE REAR SIDE SPOILER LH**

(a) Using a screwdriver, remove the 2 retainers.

HINT:

Tape the screwdriver tip before use.

(b) Remove the 2 clips, 3 screws and side spoiler.

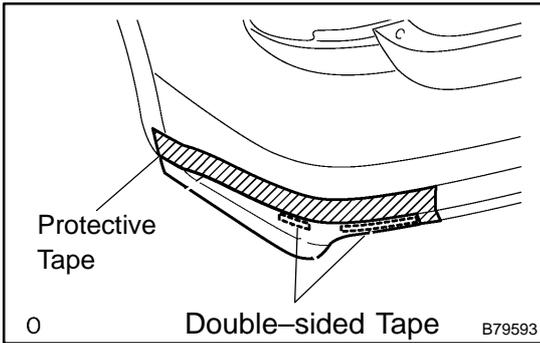

(c) Put protective tape under the rear bumper.

(d) Heat the spoiler.

**NOTICE:**

**Do not heat the spoiler excessively.**

(e) Pull off the spoiler No. 1 by cutting the adhesive with a knife.

(f) Remove the side spoiler.


**10. REMOVE REAR SIDE SPOILER RH**

(a) Using a screwdriver, remove the 2 retainers.

HINT:


Tape the screwdriver tip before use.

(b) Remove the 2 clips and screw, nut and side spoiler.

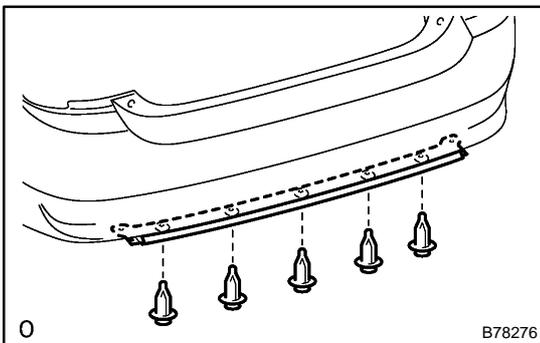

**11. REMOVE REAR NO.1 SPOILER**

(a) Using a clip remover, remove the 5 clips and No. 1 spoiler.

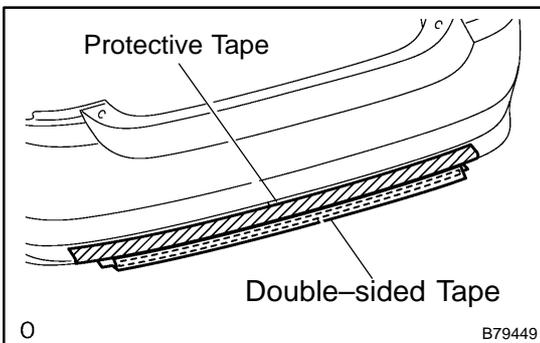

(b) Put protective tape under the rear bumper.

(c) Heat the spoiler.

**NOTICE:**

**Do not heat the spoiler excessively.**

(d) Pull off the spoiler No. 1 by cutting the adhesive with a knife.

(e) Remove the spoiler No.1.


**12. INSTALL REAR NO.1 SPOILER**

- (a) Clean the bumper surface.
- (1) Using a heat light, heat the bumper surface.
  - (2) Remove the double-sided tape from the bumper.
  - (3) Wipe off the stains with cleaner.

**NOTICE:**

**Do not heat the spoiler excessively.**

- (b) If reusing No. 1 spoiler:
- Clean the No.1 spoiler.
- (1) Remove the double-sided tape from the No. 1 spoiler.
  - (2) Wipe off the stains with cleaner.
  - (3) Apply new double-sided tape to the No. 1 spoiler, as shown in the illustration.

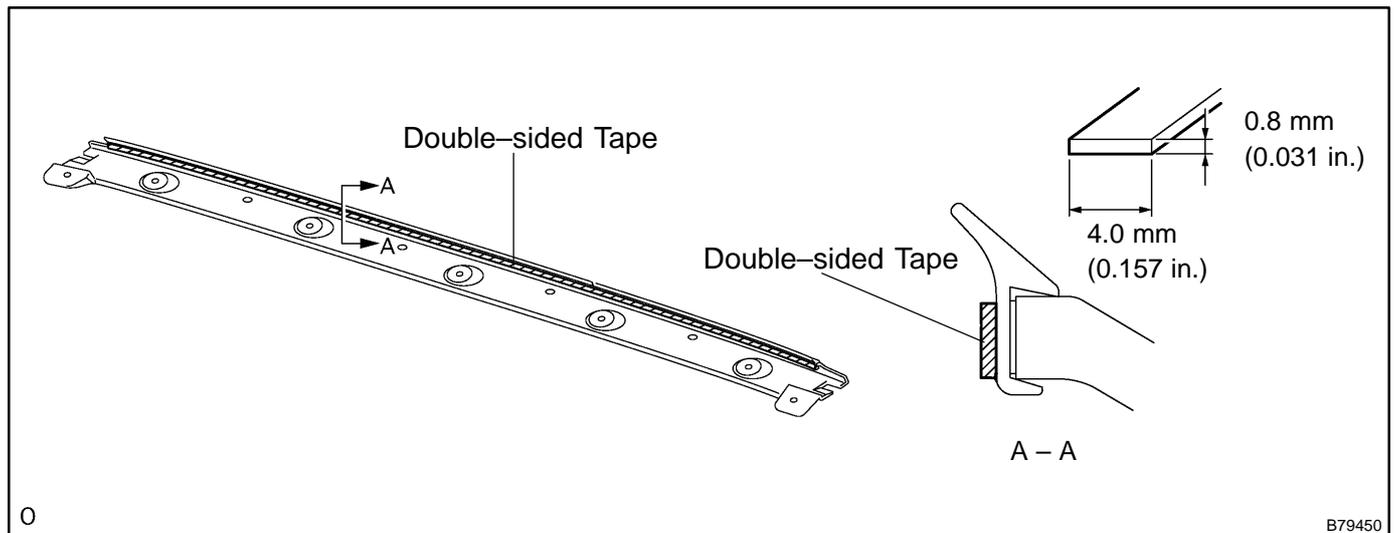

- (c) Install the No. 1 spoiler.
- (1) Using a heat light, heat the bumper and No. 1 spoiler..
  - (2) Remove the peeling paper from the face of the No. 1 spoiler.

**NOTICE:**

**Do not heat the spoiler excessively.**

**HINT:**

After removing the peeling paper, keep the exposed adhesive free from dirt and other contaminants.


**13. INSTALL REAR SIDE LH SPOILER**

- (a) Clean the bumper surface.
- (1) Using a heat light, heat the bumper surface.
  - (2) Remove the double-sided tape from the bumper.
  - (3) Wipe off the stains with cleaner.

**NOTICE:**

**Do not heat the spoiler excessively.**


- (b) If reusing side spoiler:
- (1) Remove the double-sided tape from the No. 1 spoiler.
  - (2) Wipe off the stains with cleaner.
  - (3) Apply new double-sided tape to the side spoiler, as shown in the illustration.

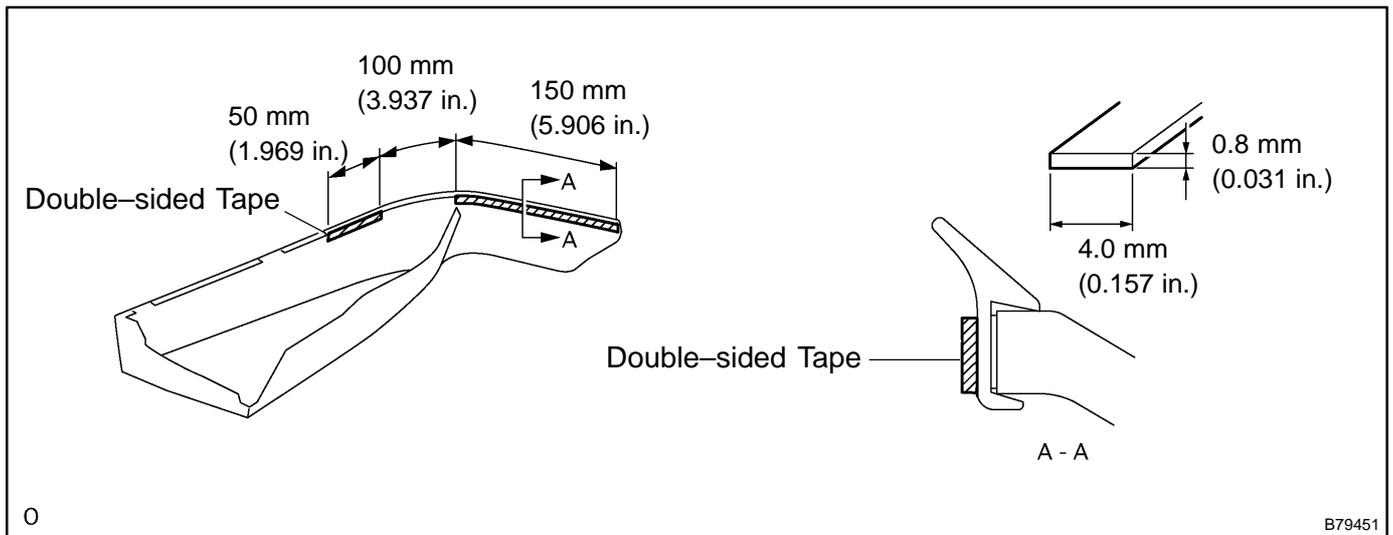

- (c) Install the side spoiler.
- (1) Using a heat light, heat the bumper and side spoiler.
  - (2) Remove the peeling paper from the face of the side spoiler.

**NOTICE:**

**Do not heat the spoiler excessively.**

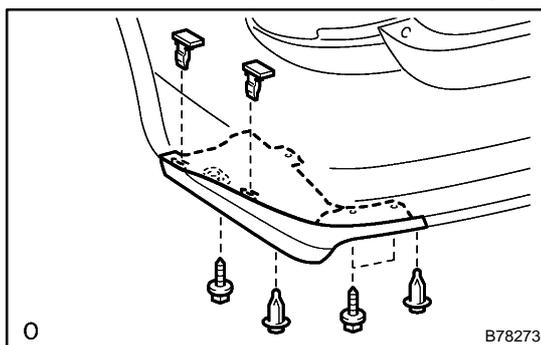

- (3) Install the side spoiler with the 2 retainers, 2 clips and 3 screws.

**HINT:**

After removing the peeling paper, keep the exposed adhesive free from dirt and other contaminants.

**14. INSTALL REAR SIDE RH SPOILER****HINT:**


Use the same procedures described for the LH side.

# REAR SPOILER SUB-ASSY REPLACEMENT

7616F-01

## HINT:

- The installation procedures are the removal procedures in reverse order.
  - A bolt without a torque specification is shown in the standard bolt chart (see page 03-2).
1. REMOVE REAR WIPER ARM COVER (See page 66-19)
  2. REMOVE REAR WIPER ARM ASSY (See page 66-19)
  3. REMOVE BACK DOOR TRIM BOARD ASSY (See page 75-33)
  4. REMOVE BACK DOOR TRIM BOARD (See page 75-33)
  5. REMOVE REAR WIPER MOTOR ASSY (See page 66-19)

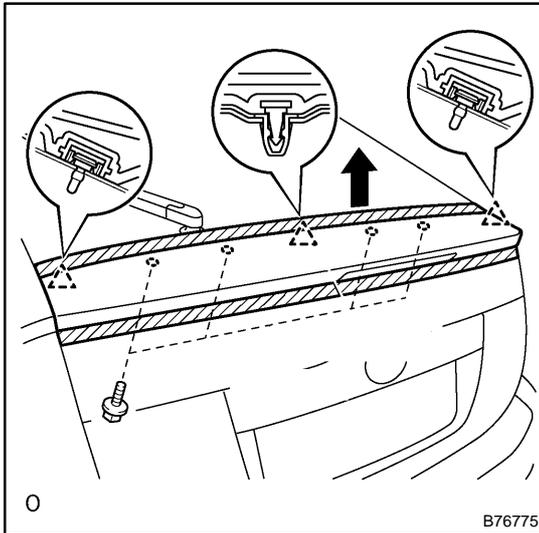

## 6. REMOVE REAR SPOILER SUB-ASSY

- (a) Put protective tape under the rear spoiler.
- (b) Remove the 4 bolts.
- (c) Using a screwdriver, disengage the 3 clips and rear spoiler.

## HINT:

Tape the screwdriver tip before use.

- (d) Disconnect the stop lamp connector.

## 7. REMOVE CENTER STOP LAMP ASSY

- (a) Remove the 2 screws and stop lamp.


# FUEL LID LOCK CONTROL ASSY REPLACEMENT

7616D-01

**HINT:**



A bolt without a torque specification is shown in the standard bolt chart (see page 03-2).

- 1. REMOVE FUEL LID LOCK OPEN LEVER SUB-ASSY**
  - (a) Remove the front seat (see page 72-2).
  - (b) Remove the rear seat (see page 72-9).
  - (c) Remove the center pillar garnish lower (see page 76-28).
  - (d) Remove the quarter trim panel lower (see page 76-28).
  - (e) Remove the quarter trim panel upper (see page 76-28).
  - (f) Remove the screw and fuel lever.
  - (g) Remove the cable.

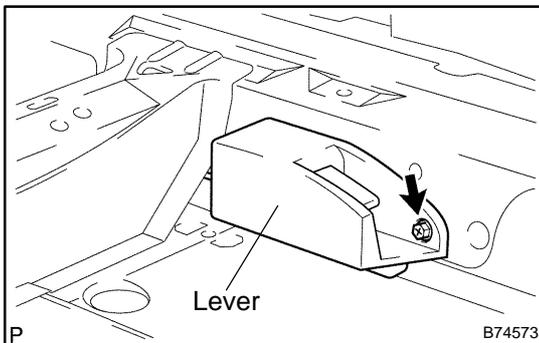


**2. REMOVE FUEL LID LOCK CONTROL CABLE SUB-ASSY**

(a) Remove the cable from the clamps at the location shown in the illustration.

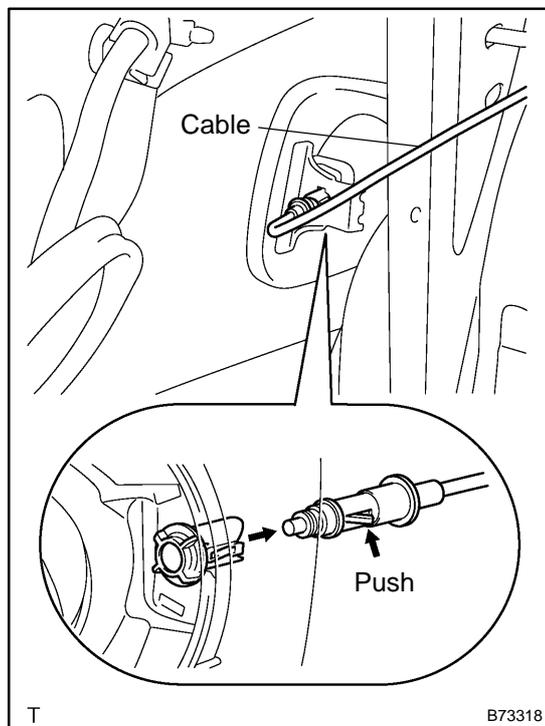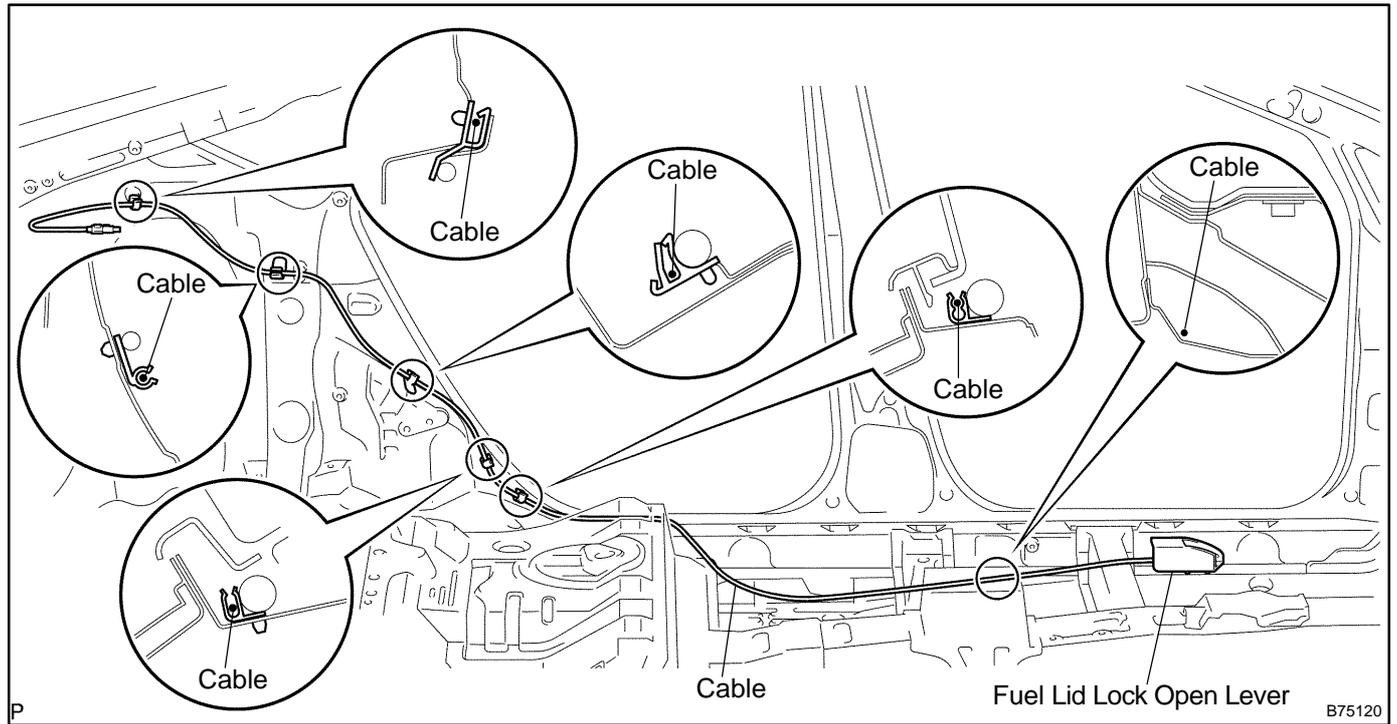


(b) Disengage the claw and remove the cable.

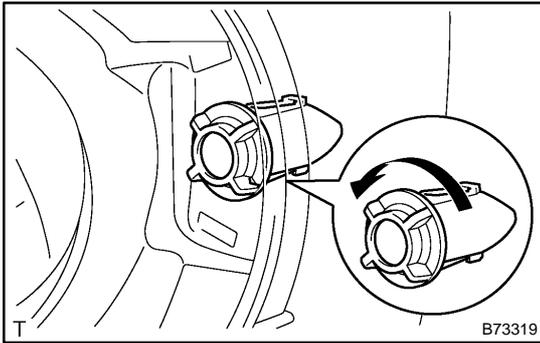


### 3. REMOVE FUEL FILLER OPENING LID LOCK RETAINER

- (a) Remove the fuel filler opening lock retainer, as shown in the illustration.

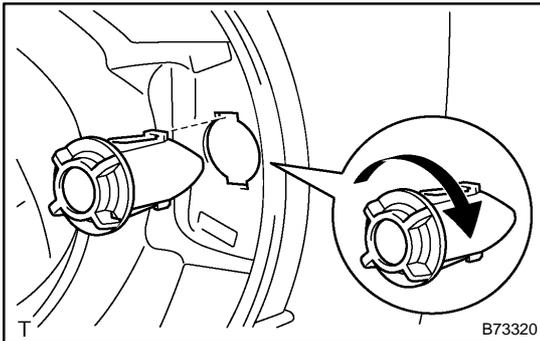

### 4. INSTALL FUEL FILLER OPENING LID LOCK RETAINER

- (a) Install the fuel filler opening lock retainer, as shown in the illustration.

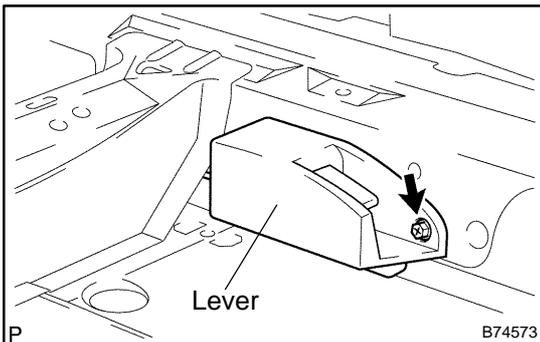

### 5. INSTALL FUEL LID LOCK OPEN LEVER SUB-ASSY

- (a) Install the cable.  
 (b) Install the lever with the screw.  
 (c) Install the quarter trim panel upper (see page 76-28).  
 (d) Install the quarter trim panel lower (see page 76-28).  
 (e) Install the center pillar garnish lower (see page 76-28).  
 (f) Install the rear seat (see page 72-9).  
 (g) Install the front seat (see page 72-2).

# NAME PLATE REPLACEMENT

7615V-01

**Standard:**


A: 74.1 mm (2.917 in.)  
 B: 48.6 mm (1.913 in.)  
 C: 114 mm (4.488 in.)  
 D: 89.1 mm (3.508 in.)  
 E: 61 mm (2.402 in.)  
 F: 115.1 mm (4.531 in.)  
 G: 66.2 mm (2.606 in.)  
 H: 32 mm (1.62 in.)  
 I: 99.6 mm (3.921 in.)  
 J: 36.2 mm (1.425 in.)  
 K: 36.9 mm (1.453 in.)  
 L: 64.5 mm (2.54 in.)

H

B76801

# SIDE MUDGUARD COMPONENTS


7615M-01

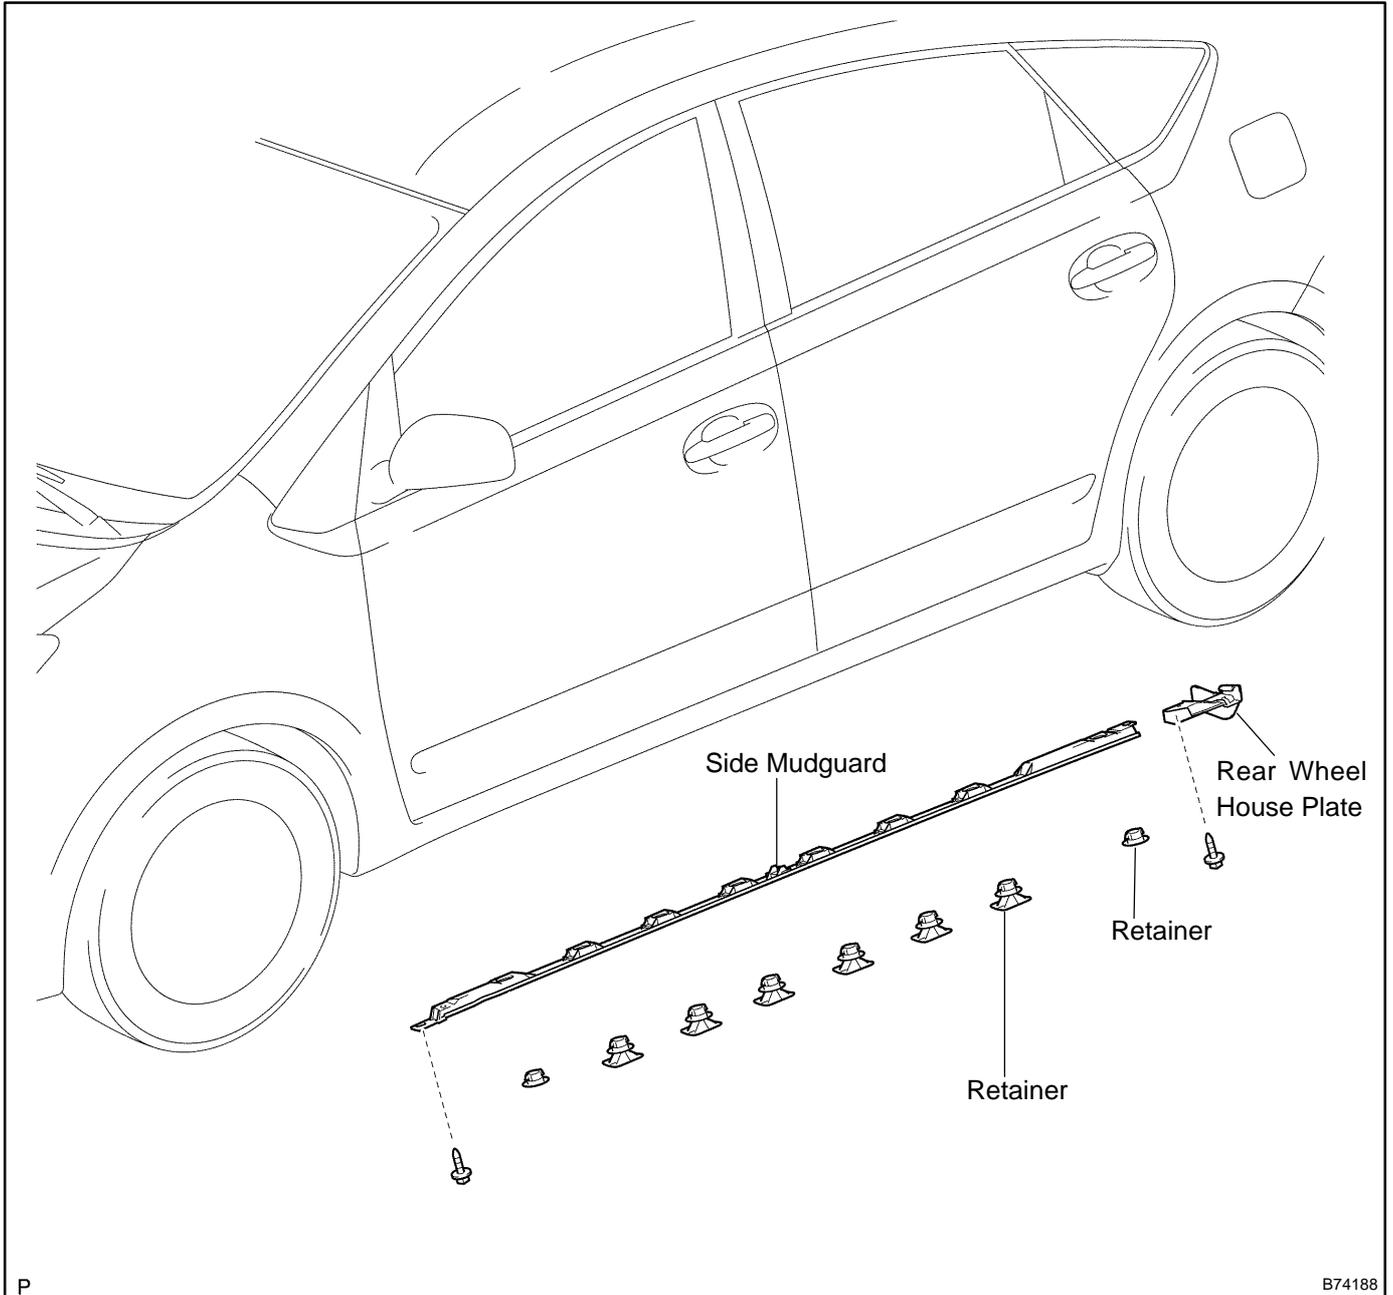

# REPLACEMENT

## HINT:

- The installation procedures are the removal procedures in reverse order.
- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

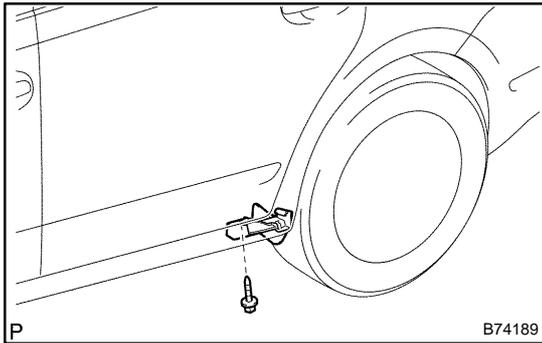


### 1. REMOVE REAR WHEEL HOUSE PLATE

- (a) Remove the screw and house plate.

### 2. REMOVE SIDE MUDGUARD

- (a) Remove the screw and 8 retainers.
- (b) Disengage the clip and remove the mudguard.

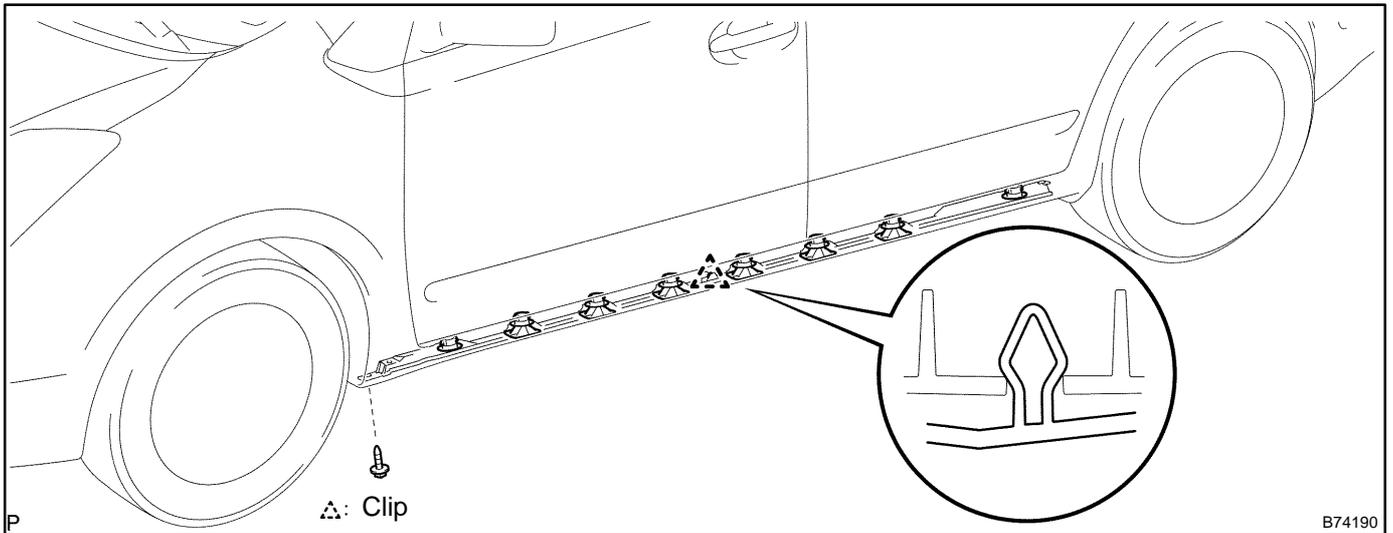

# ROOF DRIP SIDE FINISH MOULDING REPLACEMENT

76150-01

## HINT:


- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- When replacing the moulding, heat the body and moulding using a heat light.

### Heating temperature:

Item	Temperature
Body	40 to 60°C (104 to 140°F)
Moulding	20 to 30°C (68 to 86°F)

## NOTICE:

Do not heat the body and moulding excessively.

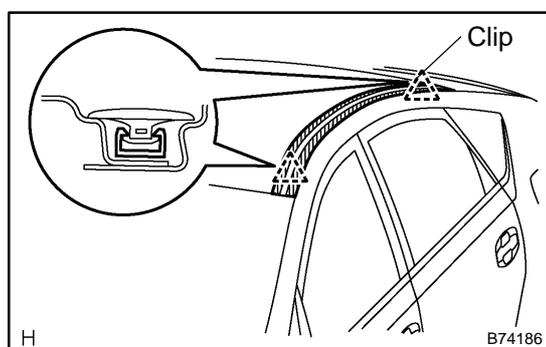


## 1. REMOVE ROOF DRIP SIDE FINISH MOULDING

- Put protective tape around the edges of the moulding.
- Using a moulding remover, disengage the moulding's front and rear end clips from the vehicle. Remove the moulding.

### NOTICE:

- Do not remove the clips from vehicle body.
- If the clips are damaged or removed accidentally, replace them.

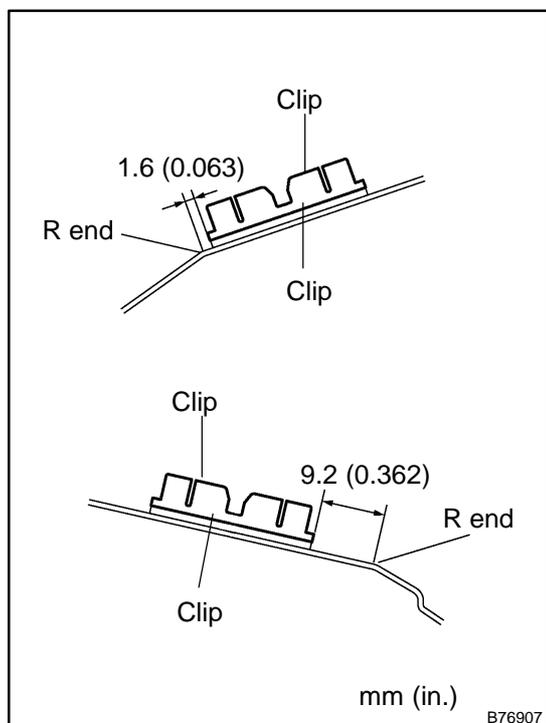

## 2. INSTALL ROOF DRIP SIDE FINISH MOULDING CLIP

### HINT:

Use the following steps (a) to (c) only when replacing the clips.


- Remove the tape that remains on the mounting surface of the body, and then clean the surface with white gasoline.
- Heat the clip installation surfaces of the body and moulding.
- Install new clips in the positions shown in the illustration. Pressfit the clips by hand.

### NOTICE:

After pressfitting the clips, wait 30 minutes or more before installing the moulding.

### HINT:

- Minimum hardening time: 30 minutes
- Time needed for complete hardening: 24 hours

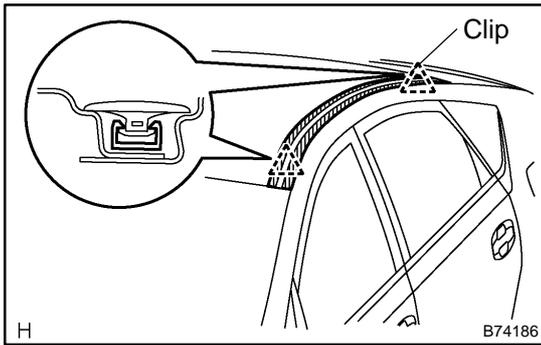**3. INSTALL ROOF DRIP SIDE FINISH MOULDING**

- (a) Install the moulding so that the front and rear ends attach to the vehicle's clips.
- (b) Remove the protective tape from the edge of the moulding.

# FRONT DOOR WINDOW FRAME MOULDING REPLACEMENT

7615Q-01

## HINT:


- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- When replacing the moulding, heat the body and moulding using a heat light.

### Heating temperature:

Item	Temperature
Body	40 to 60°C (104 to 140°F)
Moulding	20 to 30°C (68 to 86°F)

## NOTICE:

Do not heat the body and moulding excessively.

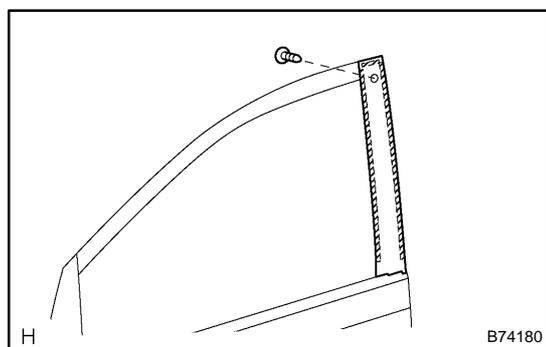


## 1. REMOVE FRONT DOOR WINDOW FRAME MOULDING

- Remove the screw.
- Using a heat light, heat the moulding.
- Remove the moulding.

### NOTICE:

If planning to reuse the moulding, take care not to damage the moulding.

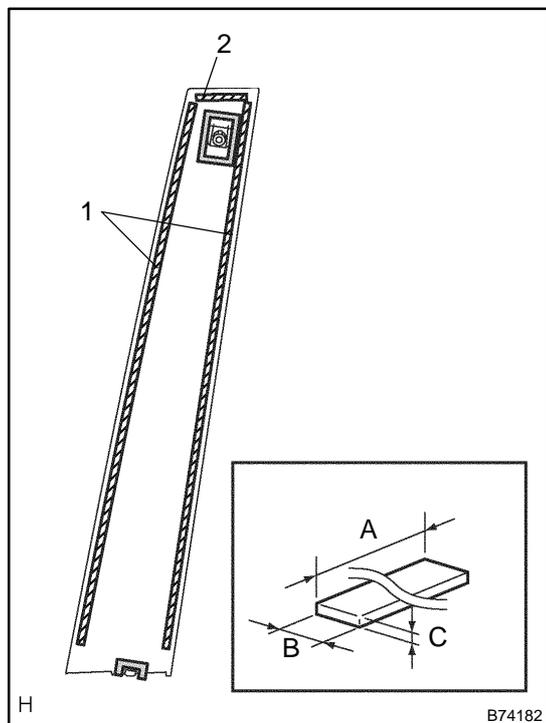

## 2. INSTALL FRONT DOOR WINDOW FRAME MOULDING

- Using a shop rag, remove the tape from the moulding.
- Clean the contact surface of the body with a shop rag saturated with white gasoline.
- Clean the outer edges of the moulding with white gasoline.
- Apply new double-sided tape to the moulding, as shown in the illustration.

### Specification:

Area	Measurement
A	1: 440 mm (17.32 in.)
	2: 37 mm (1.46 in.)
B	5.0 mm (0.197 in.)
C	0.8 mm (0.032 in.)

- Using a heat light, heat the body and moulding.
- Remove the peeling paper from the moulding face.
- Install the moulding with a screw.

# REAR DOOR WINDOW FRAME MOULDING REPLACEMENT

7615R-01

## HINT:


- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- When replacing the moulding, heat the body and moulding using a heat light.

### Heating temperature:

Item	Temperature
Body	40 to 60°C (104 to 140°F)
Moulding	20 to 30°C (68 to 86°F)

## NOTICE:

Do not heat the body and moulding excessively.

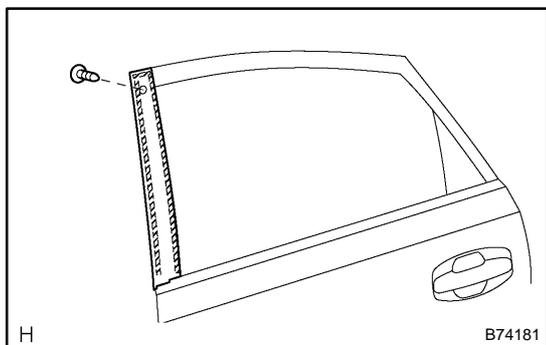


## 1. REMOVE REAR DOOR WINDOW FRAME MOULDING

- Remove the screw.
- Using a heat light, heat the moulding.
- Remove the moulding.

### NOTICE:

If planning to reuse the moulding, take care not to damage the moulding.

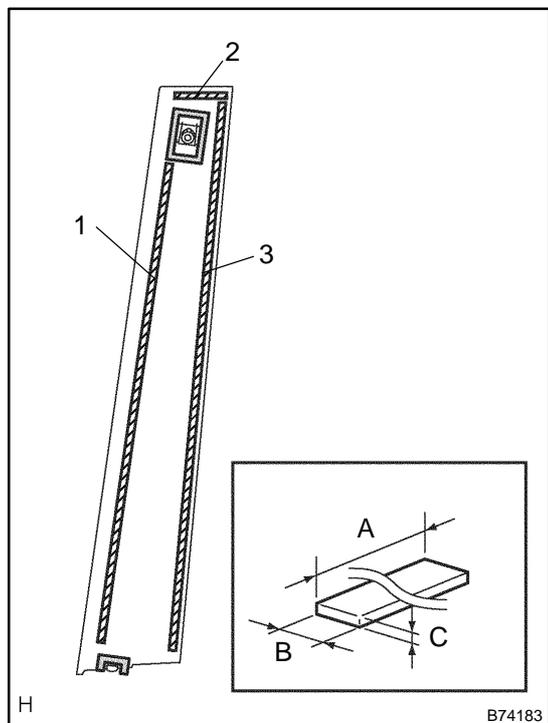

## 2. INSTALL REAR DOOR WINDOW FRAME MOULDING

- Using a shop rag, remove the tape from the moulding.
- Clean the contact surface of the body with a shop rag saturated with white gasoline.
- Clean the outer edges of the moulding with white gasoline.
- Apply new double-sided tape to the moulding, as shown in the illustration.

### Specificaiton:

Area	Measurement
A	1: 360 mm (14.17 in.)
	2: 37 mm (1.46 in.)
	3: 440 mm (17.32 in.)
B	5.0 mm (0.197 in.)
C	1: 1.2 mm (0.047 in.)
	2: 0.8 mm (0.032 in.)
	3: 0.8 mm (0.032 in.)


- Using a heat light, heat the body and moulding.
- Remove the peeling paper from the moulding face.
- Install the moulding with a screw.

# FRONT DOOR BELT MOULDING REPLACEMENT

7615S-01

## HINT:

- The installation procedures are the removal procedures in reverse order.
  - Use the same procedures for the RH side and LH side.
  - The procedures listed below are for the LH side.
1. REMOVE FRONT DOOR INSIDE HANDLE BEZEL LH (See page 75-9)
  2. REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH (See page 75-9)
  3. REMOVE DOOR PULL HANDLE (See page 75-9)
  4. REMOVE FRONT ARMREST BASE PANEL UPPER LH (See page 75-9)
  5. REMOVE FRONT DOOR TRIM BOARD SUB-ASSY LH (See page 75-9)
  6. REMOVE OUTER REAR VIEW MIRROR ASSY LH (See page 75-9)

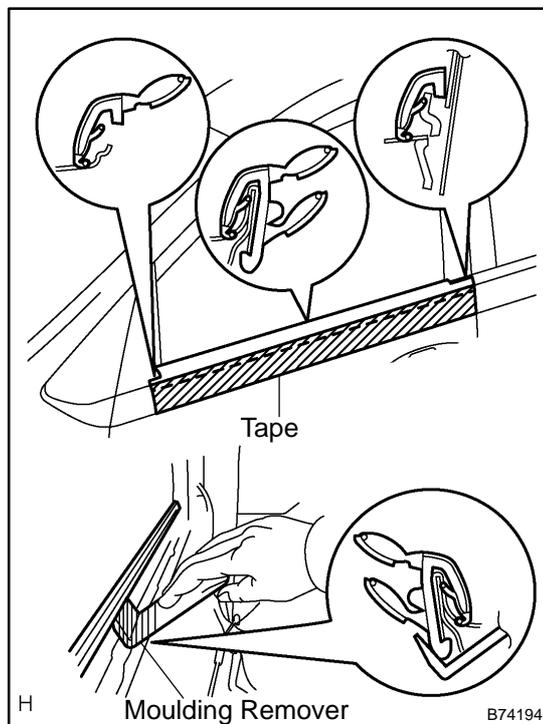

## 7. REMOVE FRONT DOOR BELT MOULDING

- (a) Put protective tape under the moulding.
- (b) Using a moulding remover, pry out the moulding as shown in the illustration.

## HINT:


Tape the remover tip before use.

# REAR DOOR BELT MOULDING REPLACEMENT

7615T-01

**HINT:**

- The installation procedures are the removal procedures in reverse order.
  - Use the same procedures for the RH side and LH side.
  - The procedures listed below are for the LH side.
1. **REMOVE FRONT DOOR INSIDE HANDLE BEZEL RH (See page 75-22)**
  2. **REMOVE DOOR PULL HANDLE (See page 75-22)**
  3. **REMOVE REAR DOOR ARMREST BASE PANEL UPPER LH (See page 75-22)**
  4. **REMOVE REAR DOOR TRIM BOARD SUB-ASSY RH (See page 75-22)**

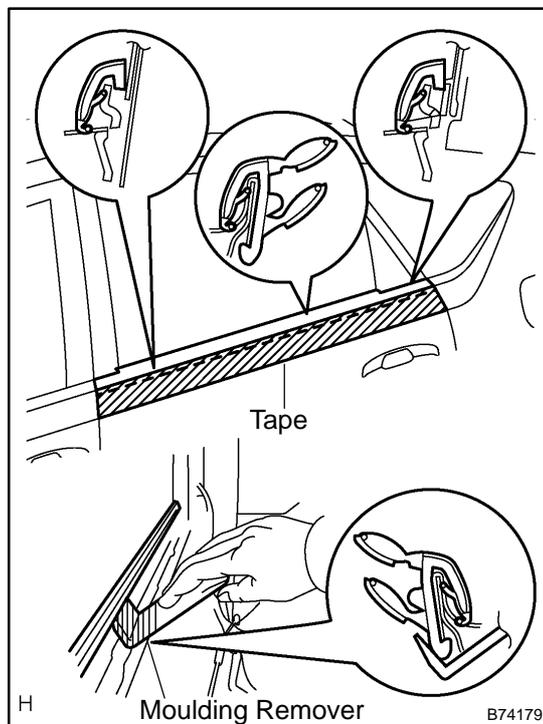**5. REMOVE REAR DOOR BELT MOULDING**

- (a) Put protective tape under the moulding.
- (b) Using a moulding remover, pry out the moulding as shown in the illustration.

**HINT:**

Tape the remover tip before use.

# BACK DOOR GARNISH REPLACEMENT

7615U-01



## HINT:

- The installation procedures are the removal procedures in reverse order.
- A bolt without a torque specification is shown in the standard bolt chart (see page 03-2).

### 1. REMOVE BACK DOOR TRIM BOARD ASSY (See page 75-33)

### 2. REMOVE BACK DOOR GARNISH SUB-ASSY OUTSIDE

- Disconnect the opener switch connector.
- Remove the 4 nuts, 2 clips and garnish.

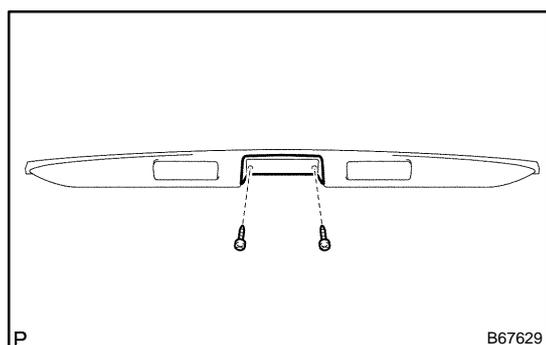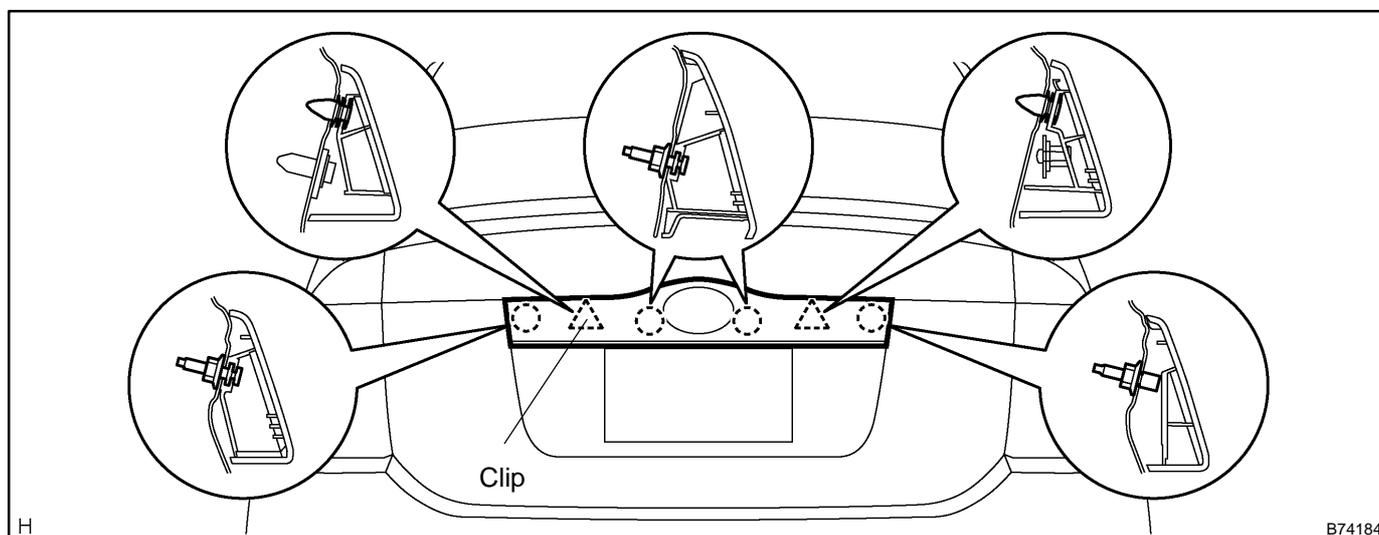


- Remove the 2 screws and back door opener switch from the garnish.

# FRONT FLOOR FOOTREST REPLACEMENT

7615P-01

**HINT:**

The installation procedures are the removal procedures in reverse order.

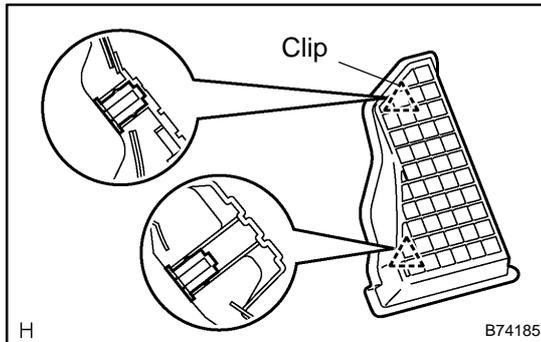**1. REMOVE FRONT FLOOR FOOTREST**


- (a) Using a screwdriver, disengage the 2 clips and remove the footrest.

**HINT:**


Tap the screwdriver tip before use.

# ROOF HEADLINING ASSY COMPONENTS


7616G-01

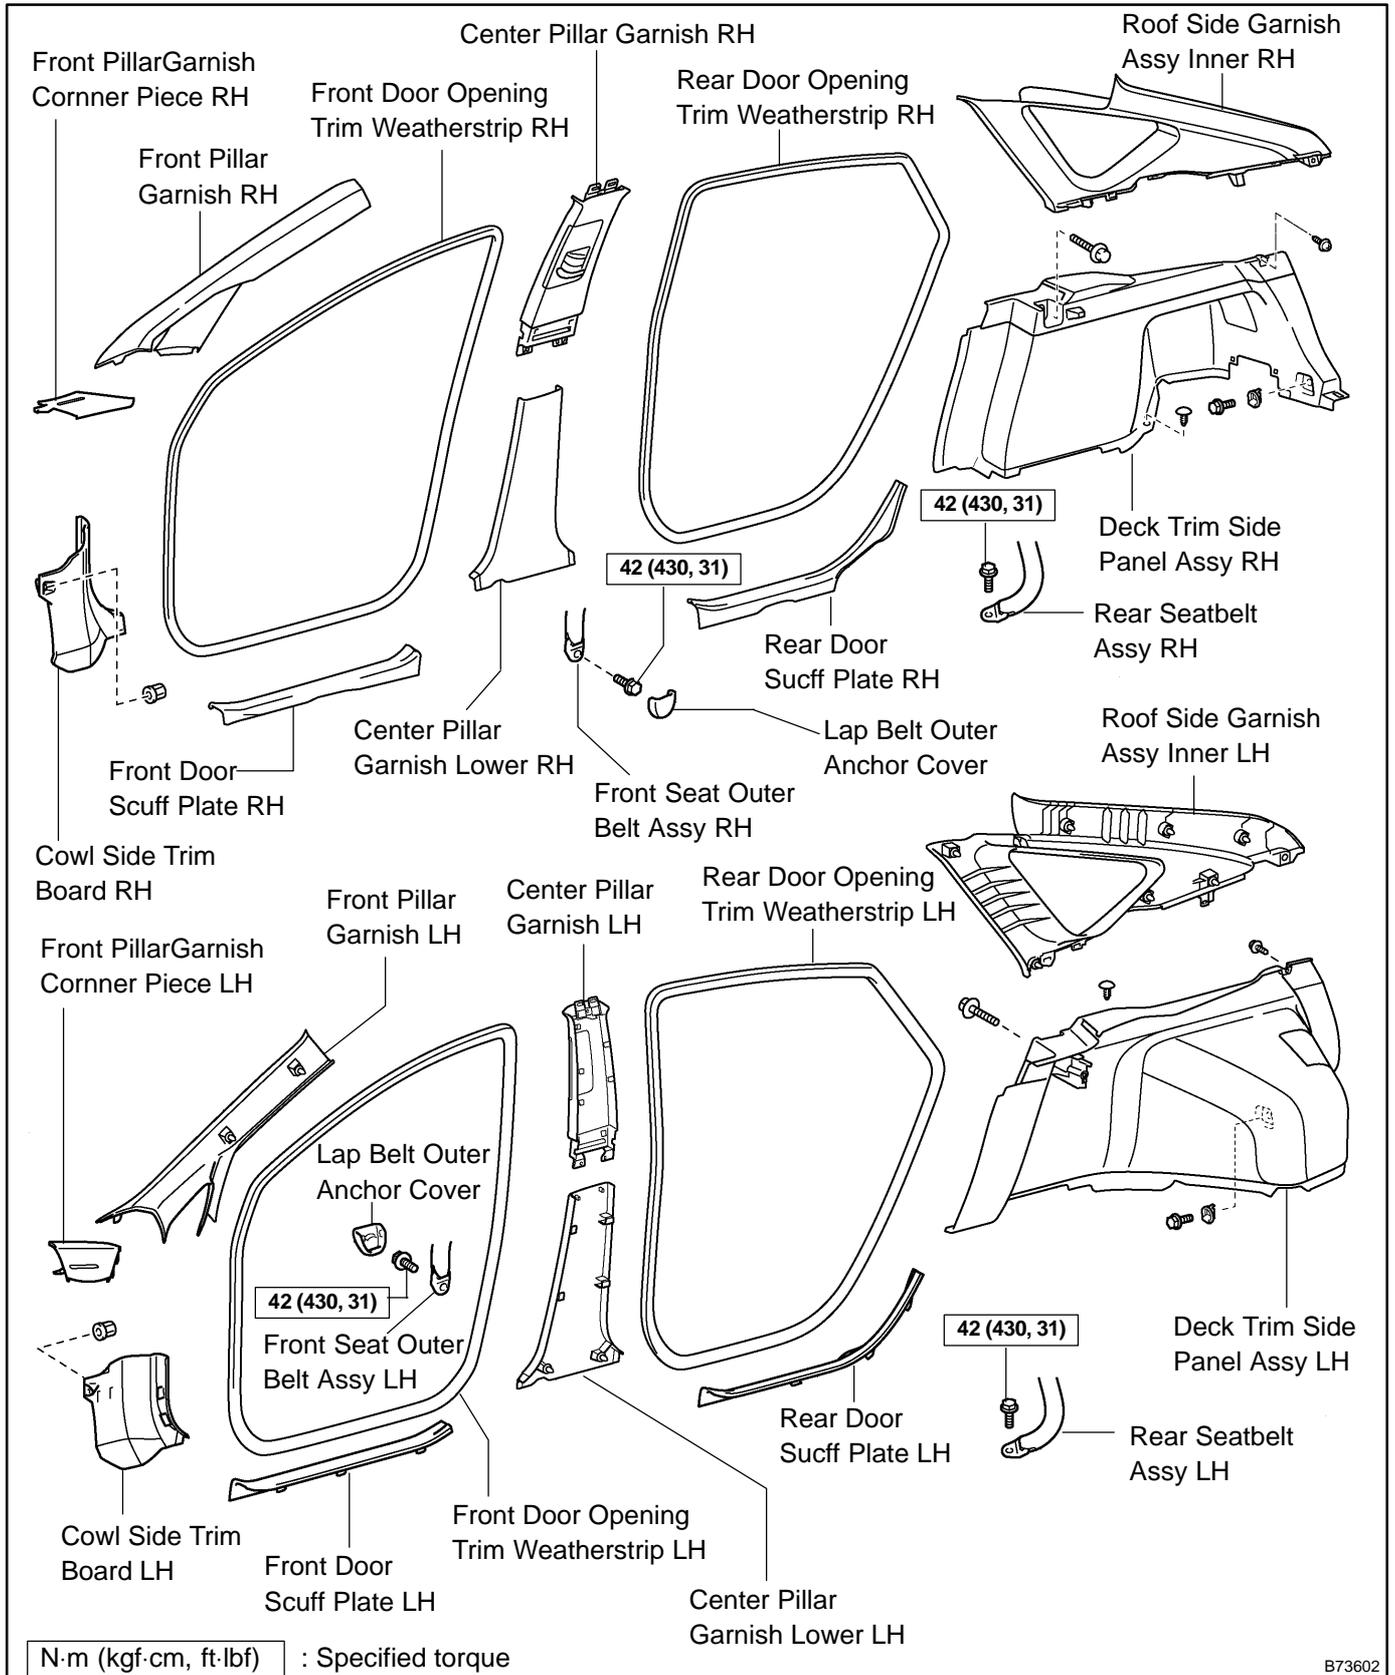

B73602

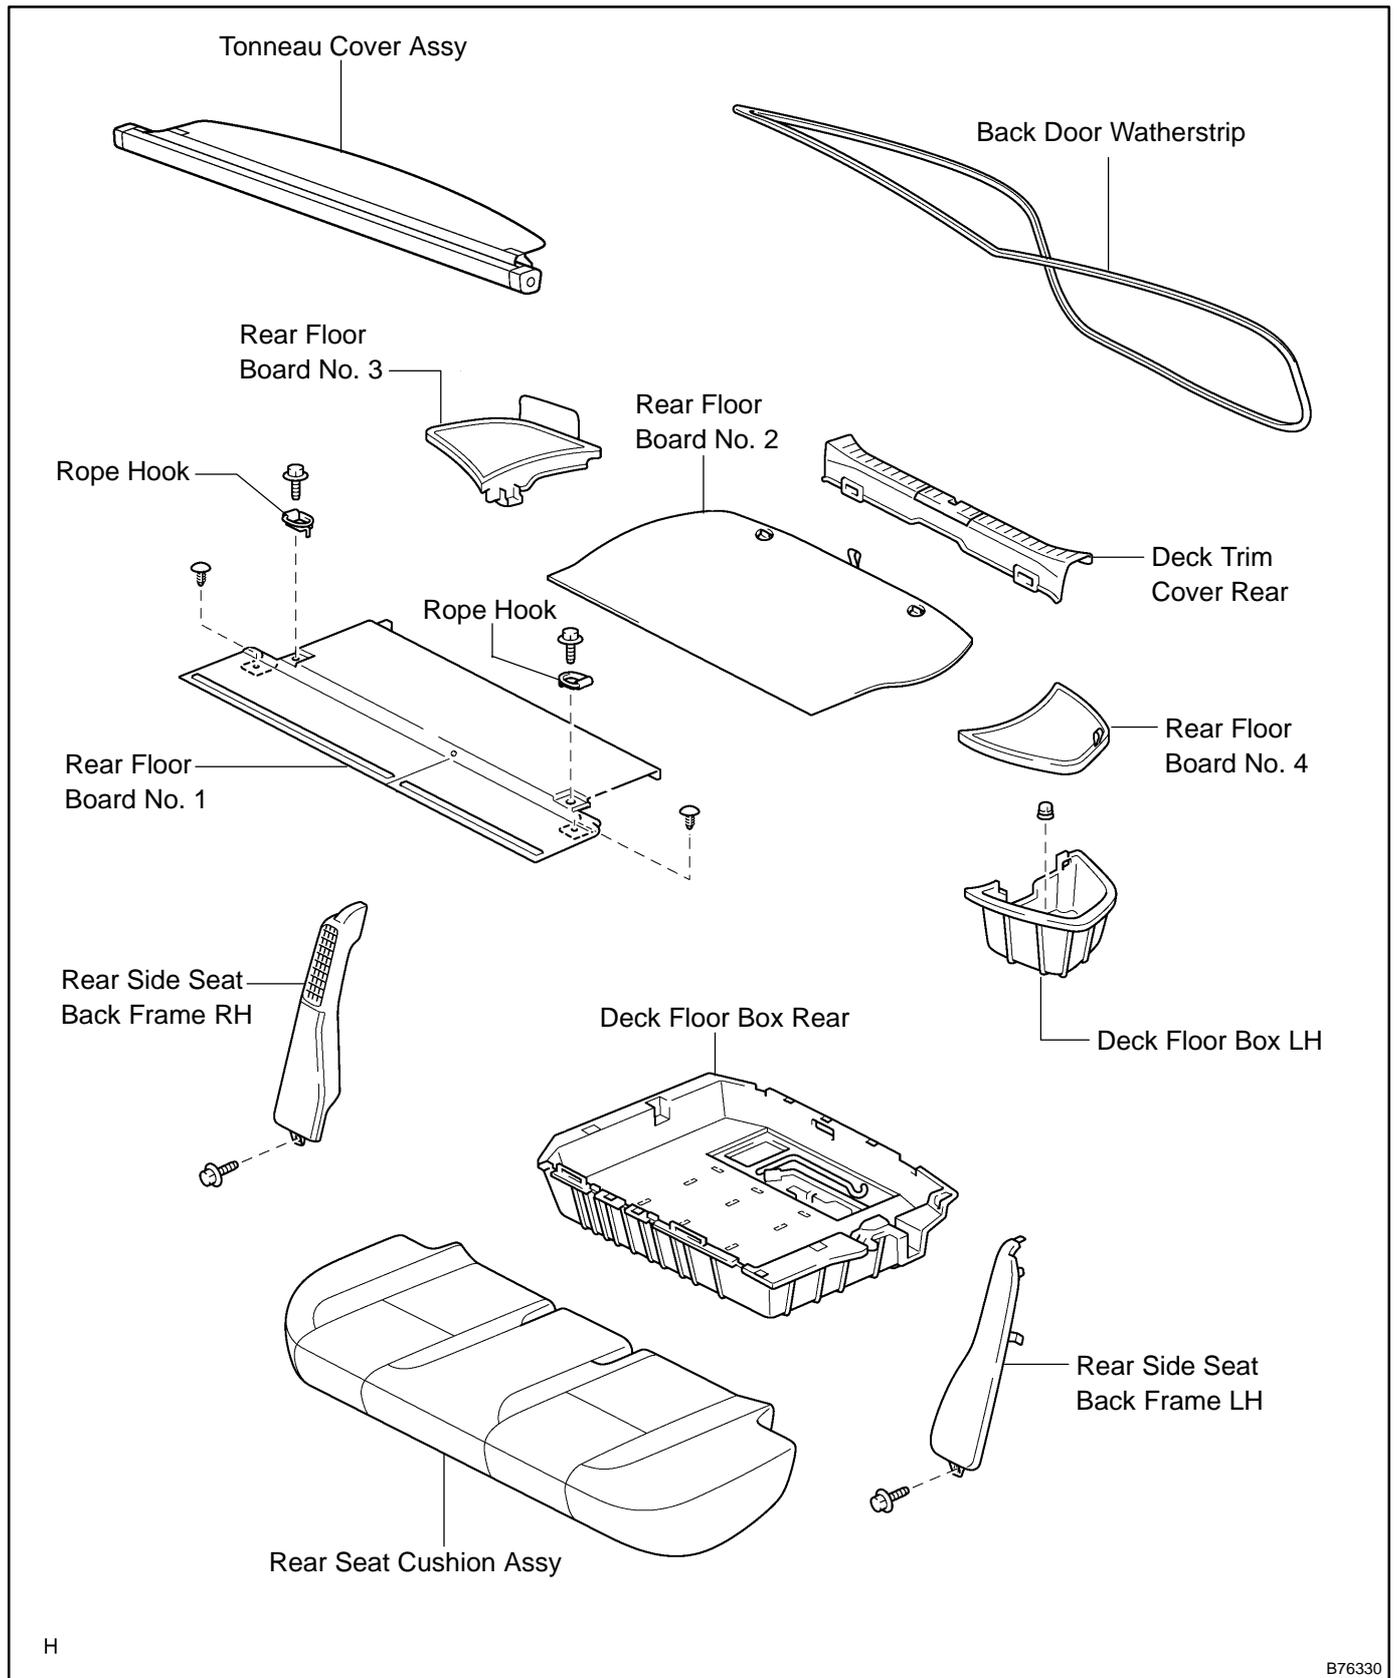


EXTERIOR/INTERIOR TRIM - ROOF HEADLINING ASSY

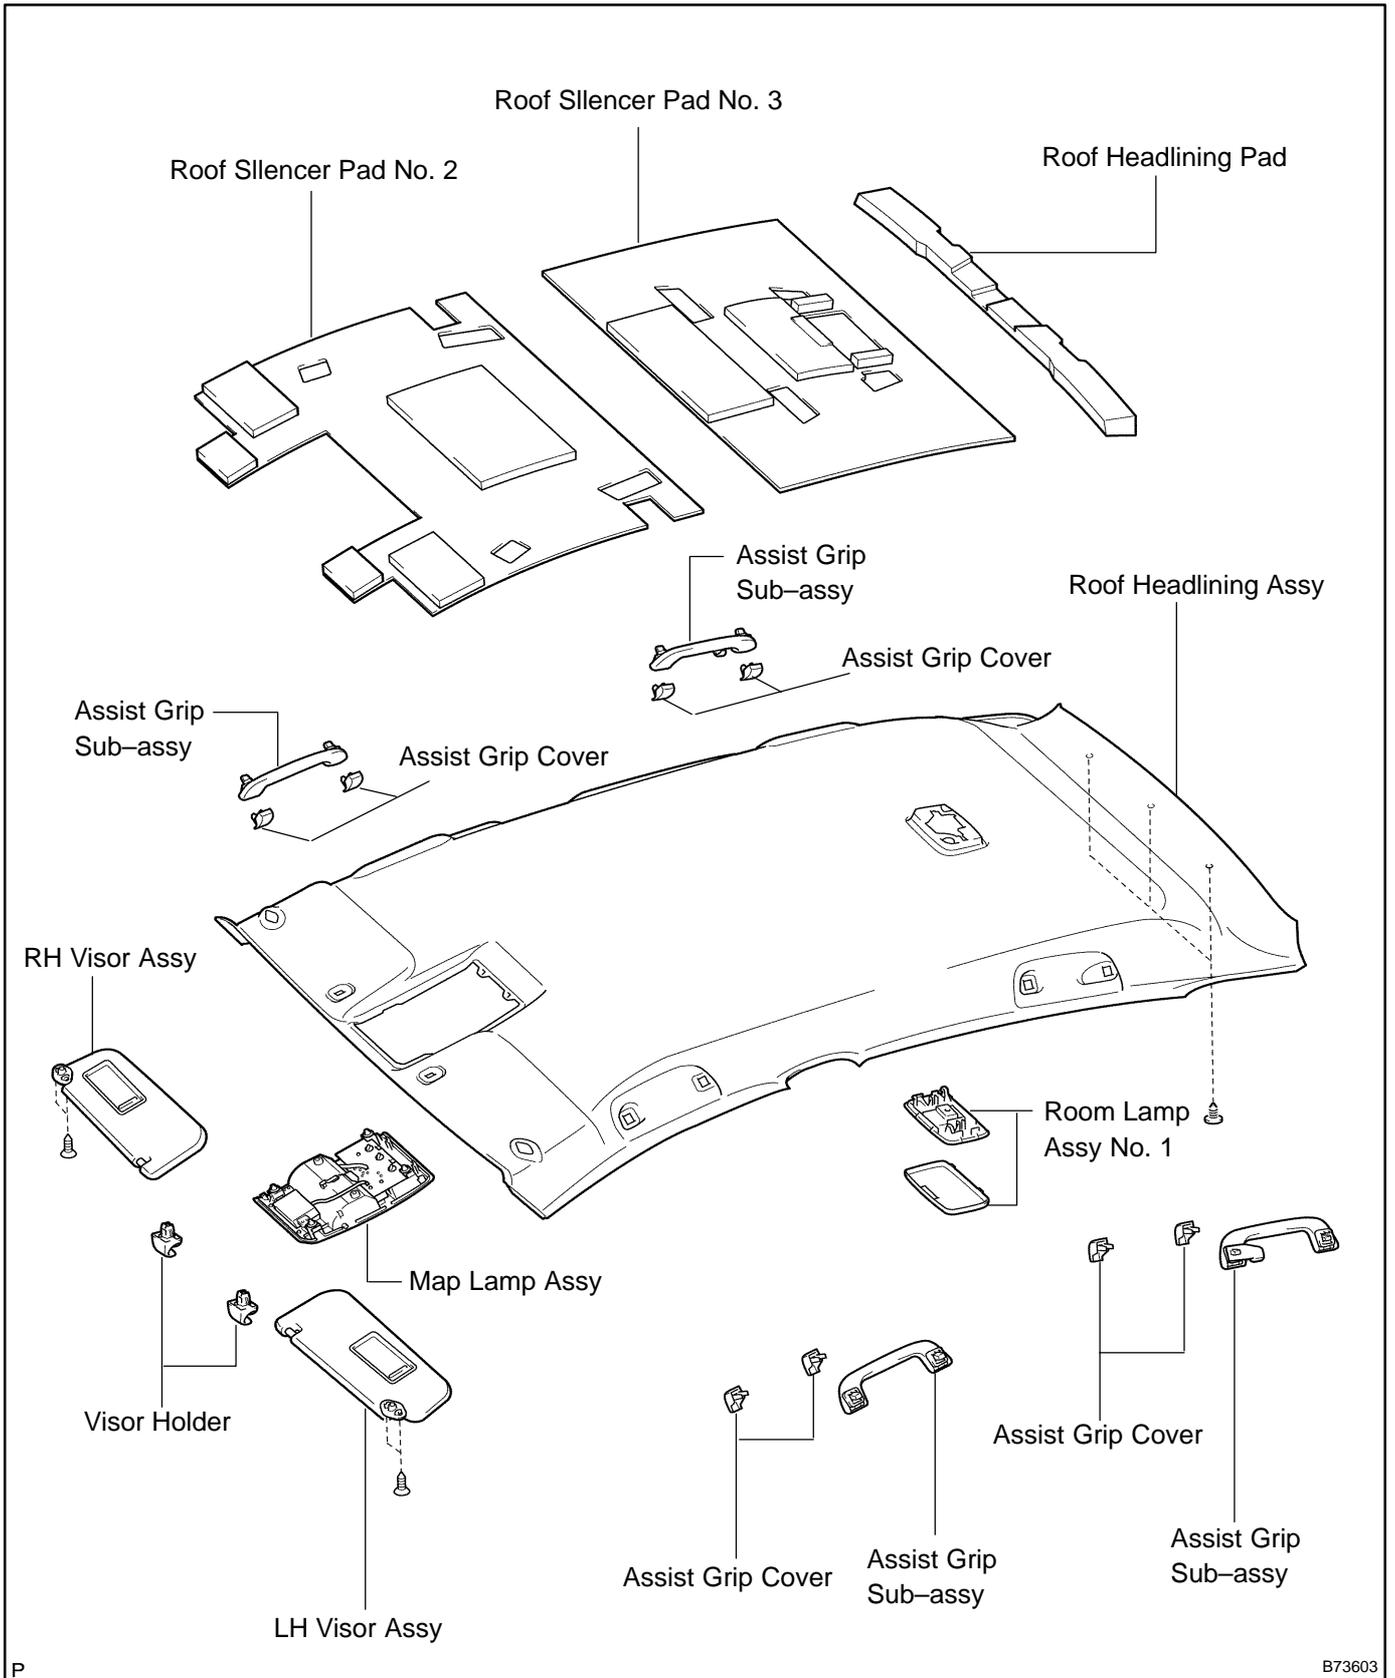

## REPLACEMENT

### HINT:

- The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring additional information are included.
- A bolt without a torque specification is shown in the standard bolt chart (see page 03-2).

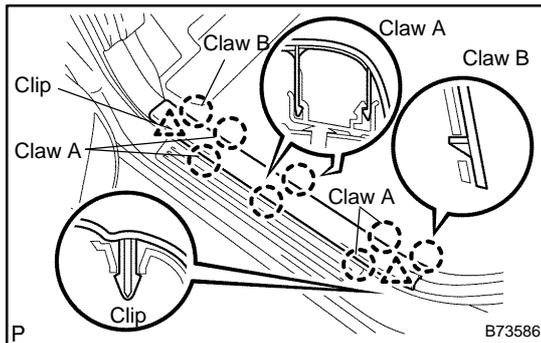

### 1. REMOVE FRONT DOOR SCUFF PLATE LH

- (a) Using a screwdriver, disengage the 6 claws labeled A and 2 claws labeled B, remove the 2 clips and scuff plate.


### HINT:

Tape the screwdriver tip before use.

### 2. REMOVE FRONT DOOR SCUFF PLATE RH

### HINT:

Use the same procedures described for the LH side.

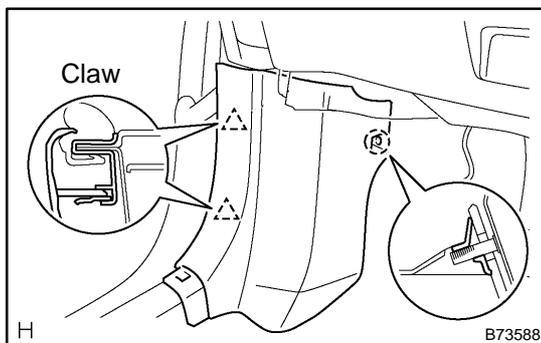

### 3. REMOVE COWL SIDE TRIM BOARD LH

- (a) Using a screwdriver, disengage the 2 claws and remove the trim board.

### HINT:

Tape the screwdriver tip before use.


### 4. REMOVE COWL SIDE TRIM BOARD RH

### HINT:

Use the same procedures described for the LH side.

### 5. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH

### 6. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH

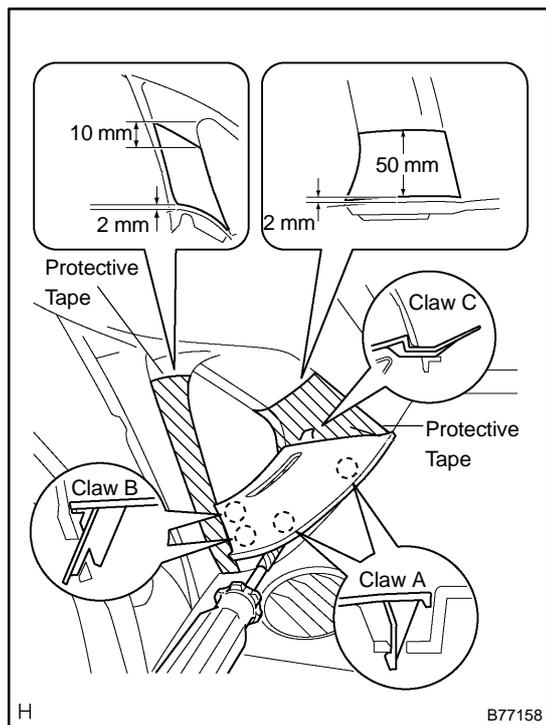

### 7. REMOVE FRONT PILLAR GARNISH CORNER PIECE LH

- (a) Using a screwdriver, disengage the 2 claws labeled A, 2 claws labeled B and claw labeled C. Remove the corner piece.


HINT:

Tape the screwdriver tip before use.

### 8. REMOVE FRONT PILLAR GARNISH CORNER PIECE RH

HINT:

Use the same procedures described for the LH side.

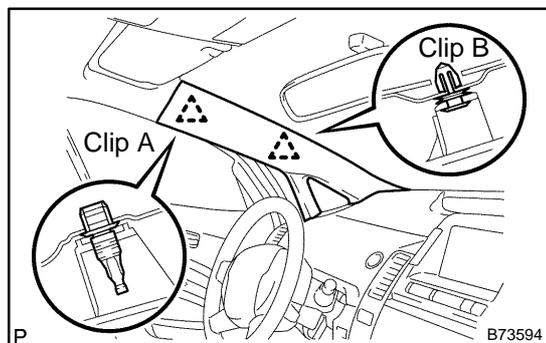


### 9. REMOVE FRONT PILLAR GARNISH LH

- (a) Using a screwdriver, remove the clip labeled A and clip labeled B and pillar garnish..

HINT:

Tape the screwdriver tip before use.

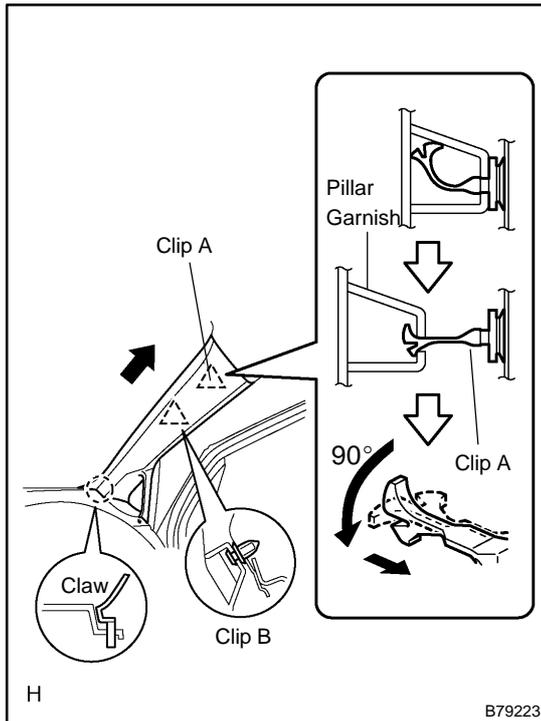

- (b) w/ Curtain shield airbag:  
 (1) Using a screwdriver, disengage the clips clip labeled A and clip labeled B.


HINT:

Tape the screwdriver tip before use.

- (c) Remove the pillar garnish.  
 (1) Pull the pillar garnish until the clip marked A in the illustration stretches.  
 (2) Turn the clip marked A in the illustration 90 degrees and remove the pillar garnish.

HINT:

Use the same procedures described for the LH side.

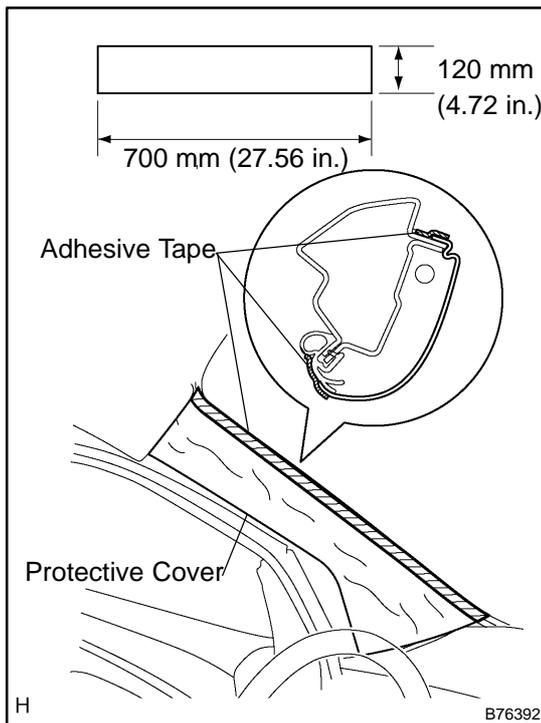

- (d) w/ Curtain shield airbag:  
 Protect the curtain shield airbag LH.

- (1) Thoroughly cover the airbag with cloth or nylon of 700 mm (27.56 in.) x 120 mm (4.72 in.) and fix the ends of the cover with adhesive tape, as shown in the illustration.

**NOTICE:**


**Cover the curtain shield airbag with the protection cover as soon as the pillar garnish is removed.**

## 10. REMOVE FRONT PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.

## 11. REMOVE REAR SEAT CUSHION ASSY (See page 72-9)

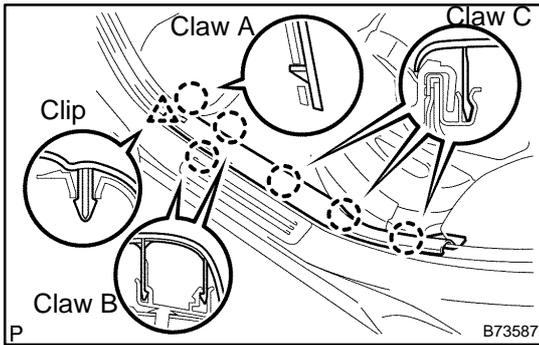**12. REMOVE REAR DOOR SCUFF PLATE LH**

- (a) Using a screwdriver, disengage the claw labeled A, 2 claws labeled B and 3 claws labeled C. Remove the scuff plate.


HINT:

Tape the screwdriver tip before use.

**13. REMOVE REAR DOOR SCUFF PLATE RH**

HINT:

Use the same procedures described for the LH side.

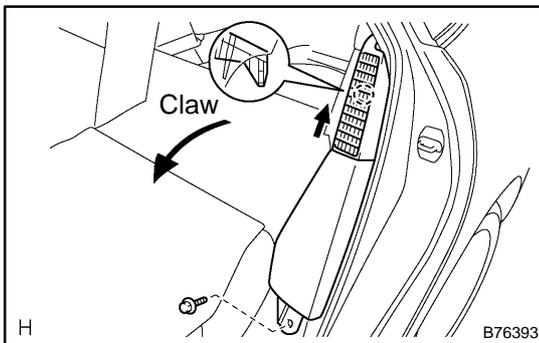
**14. REMOVE REAR SIDE SEAT BACK FRAME LH**

- (a) Remove the bolt.  
 (b) Disengage the claw and remove the frame.

**15. REMOVE REAR SIDE SEAT BACK FRAME RH**

HINT:

Use the same procedures described for the LH side.

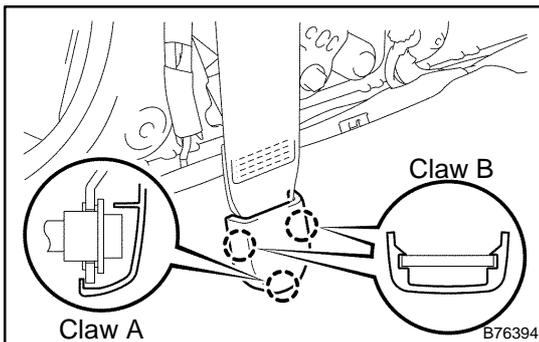**16. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH****17. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH****18. REMOVE LAP BELT OUTER ANCHOR COVER**

- (a) Using a screwdriver, disengage the claw labeled A and 2 claws labeled B and remove the anchor cover.

HINT:


Tape the screwdriver tip before use.

**19. REMOVE FRONT SEAT OUTER BELT ASSY LH**

- (a) Remove the floor anchor bolt.

**20. REMOVE FRONT SEAT OUTER BELT ASSY RH**

- (a) Remove the floor anchor bolt.

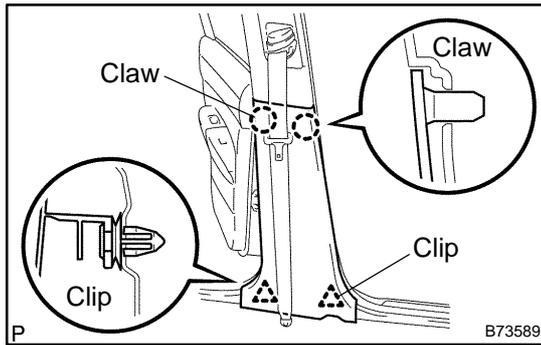**21. REMOVE CENTER PILLAR GARNISH LOWER LH**

- (a) Using a screwdriver, disengage the 2 claws and remove the 2 clips and garnish lower.


HINT:

Tape the screwdriver tip before use.

**22. REMOVE CENTER PILLAR GARNISH LOWER RH**

HINT:

Use the same procedures described for the LH side.

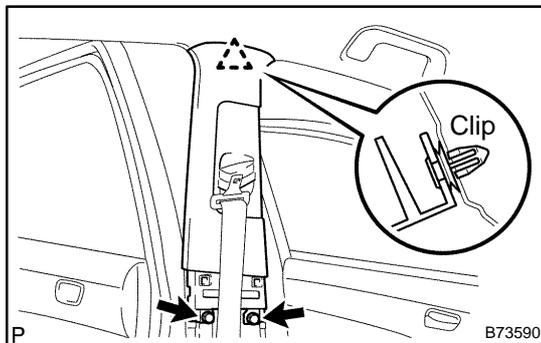**23. REMOVE CENTER PILLAR GARNISH LH**

- (a) Using a screwdriver, remove the clip and 2 screws and pillar garnish.


HINT:

Tape the screwdriver tip before use.


**24. REMOVE CENTER PILLAR GARNISH RH**

HINT:

Use the same procedures described for the LH side.

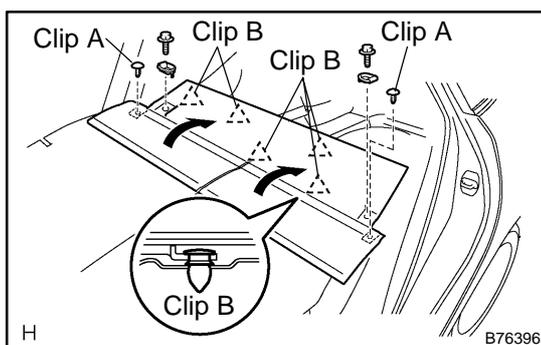**25. REMOVE REAR SEAT 3 POINT TYPE BELT ASSY OUTER****26. REMOVE REAR SEAT BELT ASSY OUTER CENTER****27. REMOVE BACK DOOR WEATHERSTRIP****28. REMOVE TONNEAU COVER ASSY****29. REMOVE REAR FLOOR BOARD NO.2****30. REMOVE REAR FLOOR BOARD NO.3****31. REMOVE REAR FLOOR BOARD NO.4****32. REMOVE DECK FLOOR BOX REAR****33. REMOVE DECK FLOOR BOX LH****34. REMOVE REAR FLOOR BOARD NO.1**


- (a) Remove the 2 bolts and 2 clips labeled A.  
 (b) Remove the 5 clips labeled B and floor board.

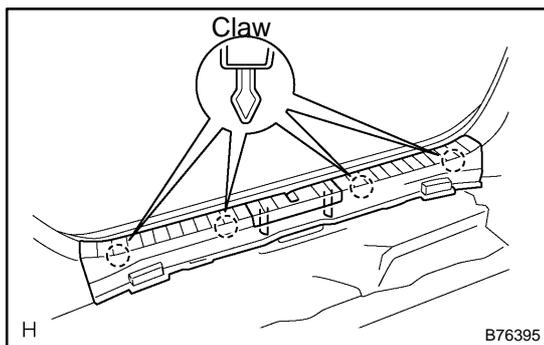**35. REMOVE DECK TRIM COVER REAR**

- (a) Using a screwdriver, disengage the 6 claws and remove the trim cover.

HINT:


Tape the screwdriver tip before use.

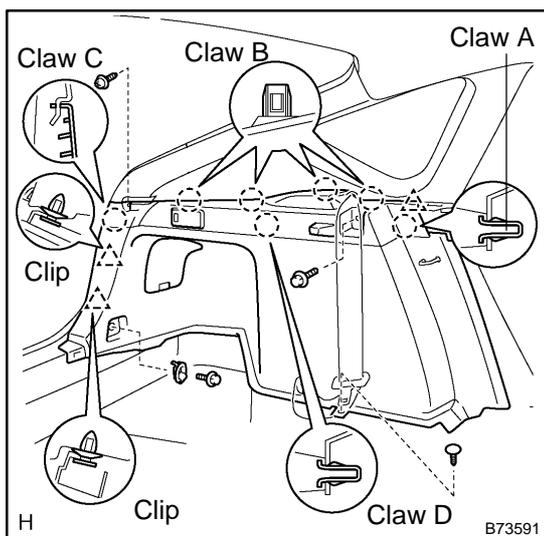**36. REMOVE DECK TRIM SIDE PANEL ASSY LH**

- (a) Remove the screw and 2 bolts.
- (b) Using a screwdriver, disengage the claw labeled A, 4 claws labeled B, claw labeled C and claw labeled D. Remove the 2 clips and side panel.

HINT:


Tape the screwdriver tip before use.

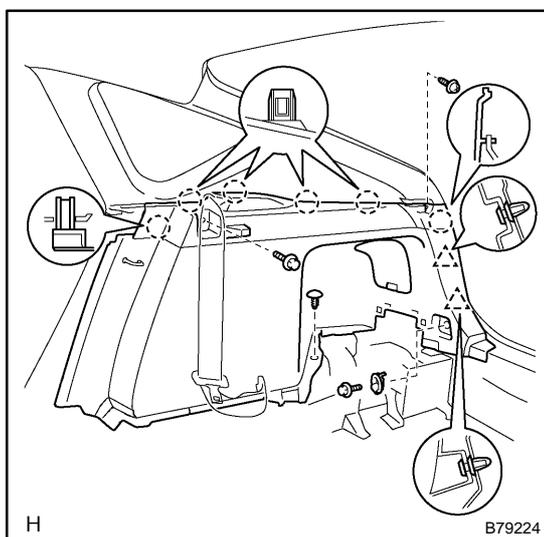**37. REMOVE DECK TRIM SIDE PANEL ASSY RH**

- (a) Remove the screw and 2 bolts.
- (b) Using a screwdriver, disengage the claw labeled A, 4 claws labeled B, claw labeled C, Remove the 2 clips and side panel.

HINT:

Tape the screwdriver tip before use.

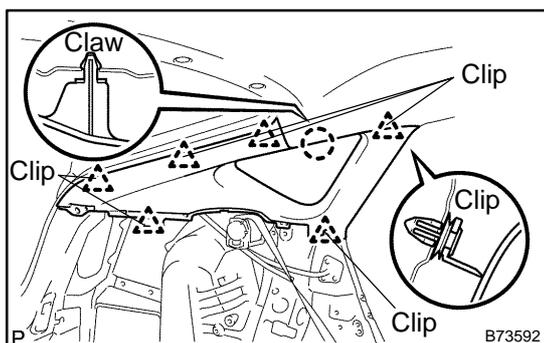**38. REMOVE ROOF SIDE GARNISH ASSY INNER LH**

- (a) Remove the 6 clips.
- (b) Using a screwdriver, disengage the claw and remove the side garnish.


HINT:

Tape the screwdriver tip before use.


**39. REMOVE ROOF SIDE GARNISH ASSY INNER RH**

HINT:

Use the same procedures described for the LH side.

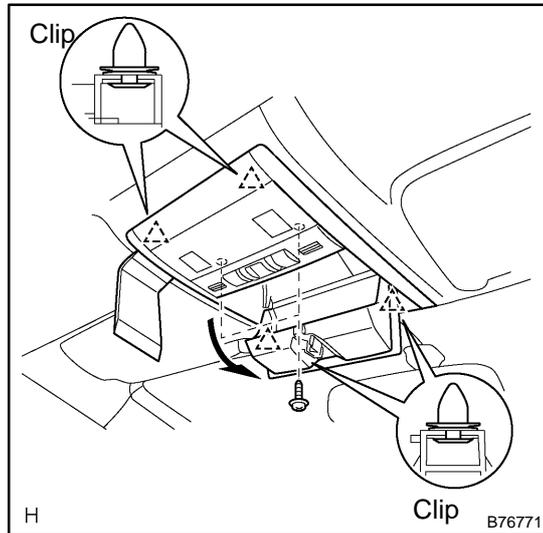**40. REMOVE MAP LAMP ASSY**


- (a) Remove the 2 screws.
- (b) Using a moulding remover, remove the 4 clips and map lamp.
- (c) Disconnect the map lamp connector.

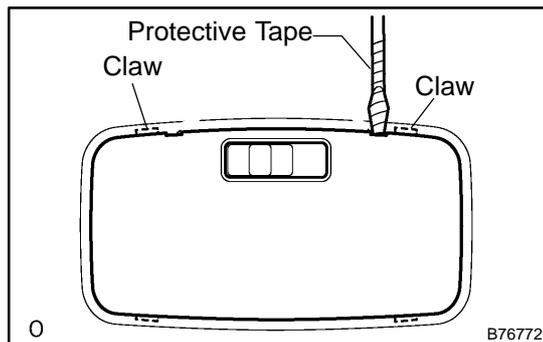**41. REMOVE ROOM LAMP ASSY NO.1**

- (a) Using a screwdriver, remove the map lamp lens.

HINT:

Tape the screwdriver tip before use.

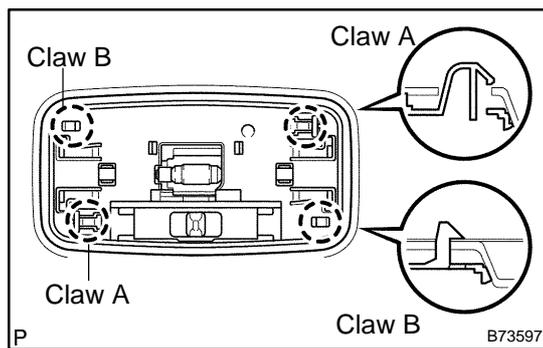


- (b) Using a screwdriver, Disengage the 2 claws labeled A and 2 claws labeled B and remove the map lamp.

HINT:

Tape the screwdriver tip before use.


- (c) Disconnect the map lamp connector.

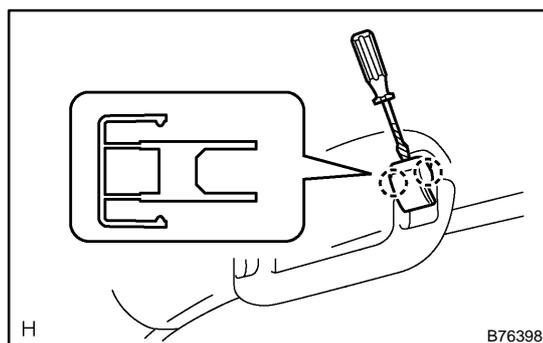**42. REMOVE ASSIST GRIP COVER**

- (a) Using a screwdriver, disengage the 4 claws and remove the 2 covers.

HINT:


Tape the screwdriver tip before use.

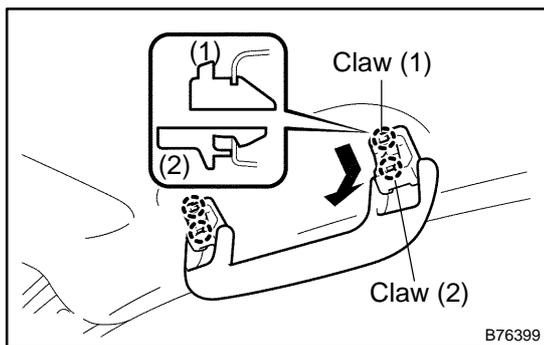**43. REMOVE ASSIST GRIP SUB-ASSY**

- (a) Using a screwdriver, disengage the 4 claws and assist grip.

HINT:

Tape the screwdriver tip before use.

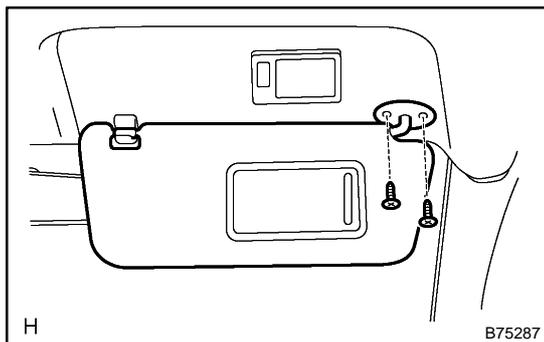
**44. REMOVE LH VISOR ASSY**

- (a) Remove the 2 screws.  
(b) Disconnect the connector, remove the visor.


**45. REMOVE RH VISOR ASSY**

HINT:


Use the same procedures described for the LH side.

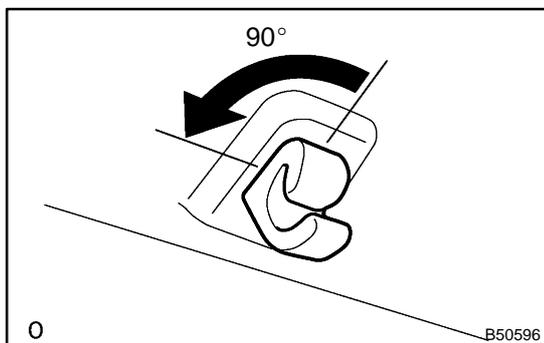**46. REMOVE VISOR HOLDER**

- (a) Remove the visor holder by turning it counterclockwise.

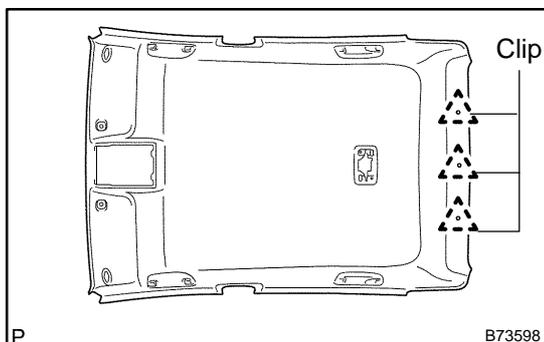**47. REMOVE ROOF HEADLINING ASSY**

- (a) Remove the 3 clips and headlining.  
(b) Remove the silencer form the headlining.

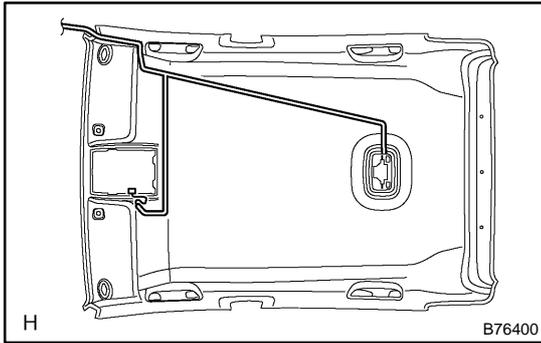**48. INSTALL ROOF HEADLINING ASSY**

- (a) Align the markings, and then install the wire harness with tape.

**NOTICE:**

**Attach the roof wire harness securely.**

- (b) Install the roof headlining with the 3 clips.

**49. INSTALL REAR SEATBELT ASSY OUT LH**

- (a) Install the seatbelt with the bolt.

**Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)**

**50. INSTALL REAR SEATBELT ASSY OUT RH**

- (a) Install the seatbelt with the bolt.

**Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)**

**51. INSTALL FRONT SEAT OUTER BELT ASSY LH**

- (a) Install the belt with the bolt.

**Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)**

**52. INSTALL FRONT SEAT OUTER BELT ASSY RH**

- (a) Install the belt with the bolt.

**Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)**