

ELECTRICAL KEY HOLDER ASSY

REPLACEMENT

8005H-01

HINT:

- The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring additional information are included.
- A bolt without a torque specification is shown in the standard bolt chart (see page [03-2](#)).

1. DISCONNECT BATTERY NEGATIVE TERMINAL

2. REMOVE INSTRUMENT PANEL FINISH PANEL SUB-ASSY LOWER (See page [71-13](#))

3. REMOVE ELECTRICAL KEY HOLDER ASSY

(a) Disconnect the connector.

(b) Remove the 2 screws and electrical key holder.

4. CONNECT BATTERY NEGATIVE TERMINAL

NOTICE:

When disconnecting the negative (-) battery terminal, initialize the following systems after the terminal is reconnected.

5. SYSTEM INITIALIZE

System Name	See Page
Power Window Control System	01-28

POWER SWITCH REPLACEMENT

8005Q-01

HINT:

- The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring additional information are included.
- A bolt without a torque specification is shown in the standard bolt chart (see page [03-2](#)).

1. DISCONNECT BATTERY NEGATIVE TERMINAL

2. REMOVE INSTRUMENT PANEL FINISH PANEL SUB-ASSY UPPER (See page [71-7](#))

3. REMOVE POWER SWITCH

- (a) Disconnect the connector.
- (b) Disengage the 2 clips and remove the power switch.

4. CONNECT BATTERY NEGATIVE TERMINAL

NOTICE:

When disconnecting the negative (-) battery terminal, initialize the following systems after the terminal is reconnected.

5. SYSTEM INITIALIZE

System Name	See Page
Power Window Control System	01-28

SMART KEY ECU REPLACEMENT

8005R-01

HINT:

- The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring additional information are included.
- A bolt without a torque specification is shown in the standard bolt chart (see page [03-2](#)).

- 1. DISCONNECT BATTERY NEGATIVE TERMINAL**
- 2. REMOVE INSTRUMENT PANEL FINISH PANEL SUB-ASSY UPPER (See page [71-7](#))**
- 3. REMOVE SMART KEY ECU**
 - (a) Disconnect the connector.
 - (b) Remove the 2 screws and smart key ECU.
- 4. CONNECT BATTERY NEGATIVE TERMINAL**

NOTICE:

When disconnecting the negative (-) battery terminal, initialize the following systems after the terminal is reconnected.

5. SYSTEM INITIALIZE

System Name	See Page
Power Window Control System	01-28