
# Rescue Sheet standard translation (Italian)


Airbag	Rinforzi strutturali della carrozzeria	Centralina di controllo	Generatore di gas
Molle a gas	Batteria	Protezione attiva anti- ribaltamento	Tenditore della cintura di sicurezza
Pretensionatore della cintura di sicurezza		Serbatoio (GPL o Metano)	Valvola di sicurezza (GPL o Metano)
Componenti ad alta tensione	Componenti o cavi ad alta tensione	Punto di disconnessione della batteria ad alta tensione	Batteria ad alta tensione
Sensore meccanico			

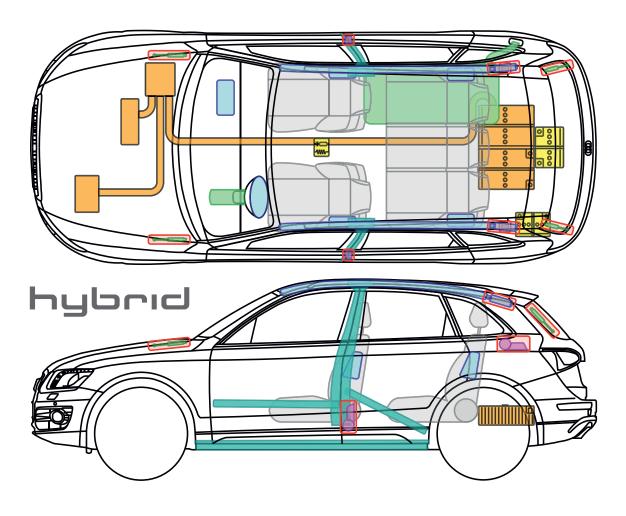

from 2011



## Legend

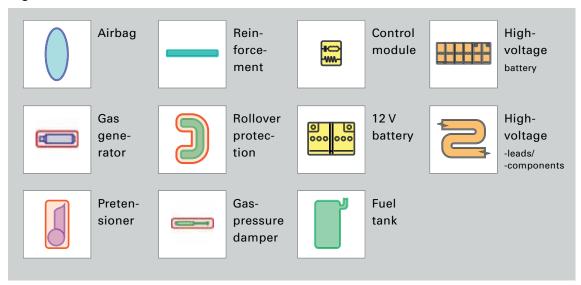

This document is a subject to the copyright of AUDI AG, Ingolstadt. Any duplication, distribution, storage, communication, broadcast and reproduction or transmission of the contents without written approval from AUDI AG is prohibited.





Audi Q5 hybrid quattro

from 2011

## Identifying feature

The Audi Q5 hybrid quattro can be identified by means of the "hybrid" logo.



#### Hints



In the case of accidents in which the airbags are deployed, the high-voltage system is deactivated.

In the case of accidents with deployed/undeployed airbags

- ► Place Vehicle in Park and set parking brake
- ► Switch off the ignition
- ▶ Disconnect the negative terminals of the 12V battery



# The electric motor is silent!



It may not be possible to detect that the car is ready to go by the noises it makes when in operation, as the electric motor is silent. If the large needle in the dial on the left of the instrument cluster (power metre) is not on "OFF" (for example on the "READY position), you have to expect that the electric motor may run or the internal combustion engine may start automatically.

## Switch off the ignition



With the ignition switched on and the key in the ignition: Switch off the ignition by pressing the key into the ignition lock without depressing brake pedal. Pull out the key.



With the ignition switched on and the key not in the ignition (possible with the convenience key):

Press START ENGINE STOP button **without** depressing brake pedal. If possible, take the convenience key outside the transmission range of the vehicle (5 meter).



Risk of Injury: By pressing the key/the START ENINGE STOP button with depressing brake pedal, the engine starts!





from 2011


## Disconnect the negative terminals of the 12 V batteries

#### Option A:

Release the luggage compartment floor by means of the screws indicated by the arrows (screw-driver in the car tool kit) Disconnect the ground cables from both 12V batteries (picture on right)

#### Option B:

Lever up the luggage compartment floor by inserting a crowbar at the points indicated. Lift up the luggage compartment floor. Disconnect the ground cables from both 12V batteries (picture on right)

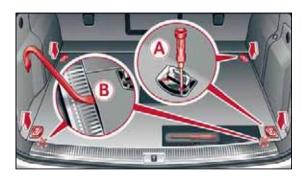



# Identification of the high-voltage components

Identification of the high-voltage battery



Identification of the The high-voltage battery is located under the luggage compartment floor.

It is a lithium-ion battery.

Identification of the remaining high-voltage components





All the high-voltage leads and the high-voltage connections are provided with orange insulation. These items must not be disconnected or damaged.

